

## E4 Series Electric Furnace

### ADDENDUM

- For proper indoor blower operation and temperature rise, the E4 electric furnace requires that the system thermostat be configured NOT to call for the indoor blower to operate in the heating mode. Refer to your specific thermostat installation instructions for details on the heating mode indoor blower configuration.
- The E4 series electric furnaces incorporate an integrated control. The thermostat's 1st stage compressor signal, **Y**, must be connected to the **YELLOW** control wire at the furnace to enable the indoor blower off-delay in the cooling mode. See Figure 1 below.

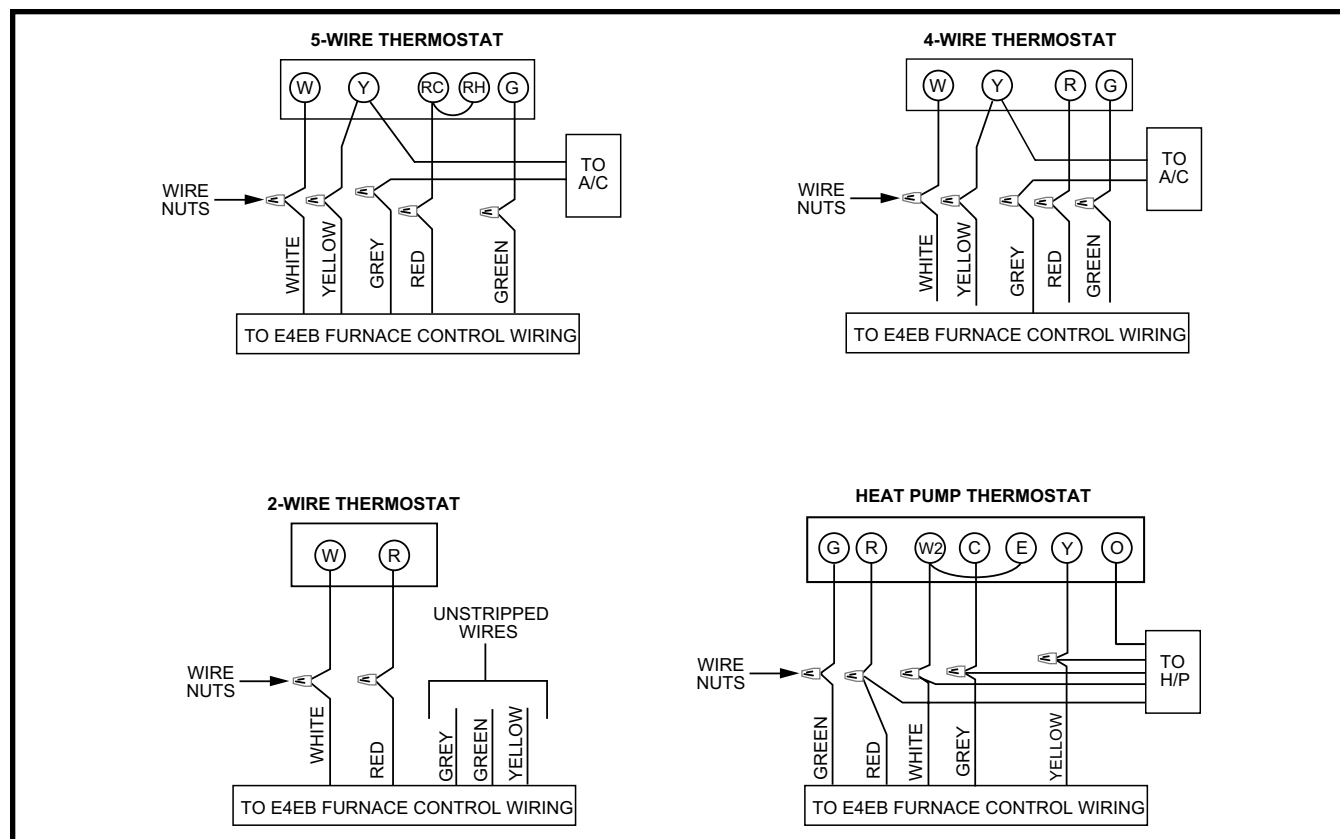


Figure 1. E4EB Thermostat Connections