

Ambient Sensor Mounting Instructions

ADDENDUM

For optimum performance of the heat pump system, the ambient sensor is factory installed on the control panel. Location is shown in Figure 1.

This addendum overwrites the Ambient Sensor Mounting instructions in the installation instructions supplied with the unit.

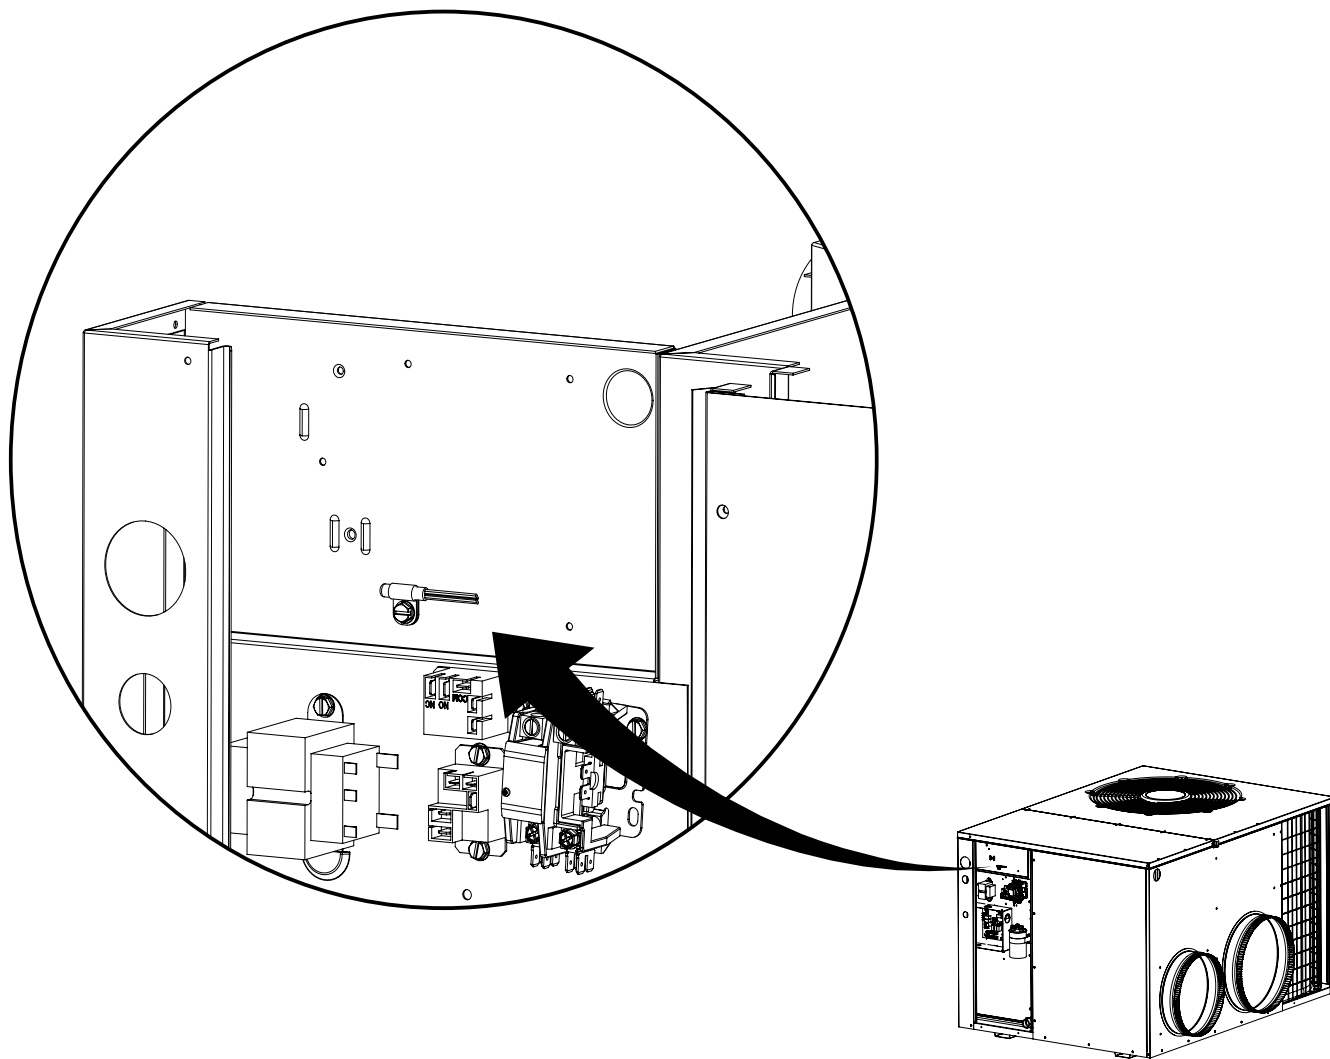


Figure 1. NEW SENSOR MOUNTING LOCATION

