WIRING DIAGRAM


Gas Direct Ignition Furnace, Heating & A/C Ready.

NOTES:

1. Incoming power must be polarized. Observe color coding. (See furnace data label for electrical information.)

2. If any of the original wires (as supplied with the appliance) must be replaced, use 105°C Thermoplastic type wire or its equivalent.

3. A wire from "Y" on the thermostat to the furnace is required.

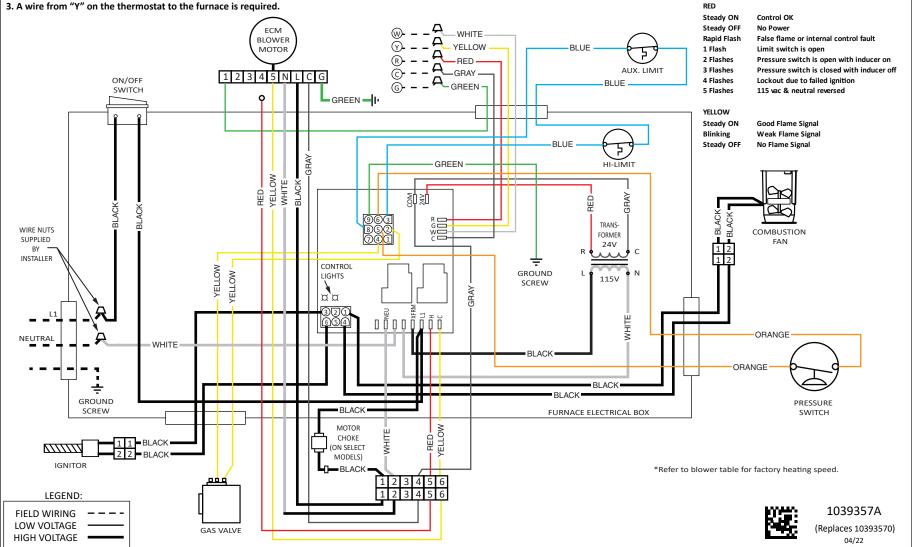

CONTROL LIGHT STATUS