

E Series Replacement Heater Kit

Installation Instructions

For E7 Electric Furnace Series

IMPORTANT SAFETY INFORMATION

INSTALLER: Please read all instructions before servicing this equipment. Pay attention to all safety warnings and any other special notes highlighted in the manual. Safety markings are used frequently throughout this manual to designate a degree or level of seriousness and should not be ignored.

WARNING:

Indicates a potentially hazardous situation that if not avoided, could result in personal injury or death.

CAUTION:

Indicates a potentially hazardous situation that if not avoided, could result in personal injury or death.

WARNING:

This kit must be installed by a qualified service technician in accordance with these instructions and all codes having jurisdiction. Failure to follow these instructions could result in possible damage to equipment, serious personal injury, or death.

For E Series Electric Furnaces

1. Cut off the end of the rod extension at the dimple.
2. Install main air limit(s) from old element plate to new element plates. Refer to Figure 1 for main air limit location(s).

For units manufactured before January 1 2024:

1. Install covers by screwing in plates over backup limit hole(s). Refer to Figure 1 for main air limit location(s).

For units manufactured after January 1 2024:

1. Install backup limit(s) from old element plate to new element plates. Refer to Figure 1 for main air limit location(s).

FURNACE PARTS IDENTIFICATION

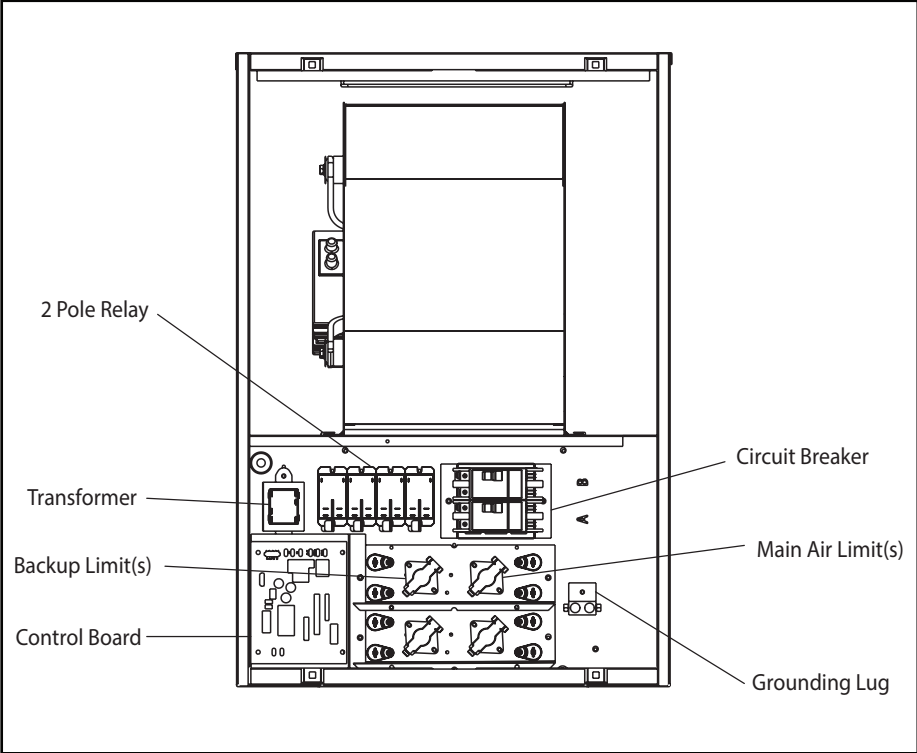


Figure 1. Main Air Limit Location(s)



10502090
(NEW)