

INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS FOR 558857 HAIL GUARD USED WITH Q5SN 090-120 UNITS

FORM# 545C-0907 (545C-0707)

The Hail Guard is designed to prevent damage to the condenser coil of the unit. The following list of parts are required:

Step 1:

Check for correct number of parts. See list below.

- 1 - Hail Guard (A)
- 1 - Top Panel (B)
- 2 - Vertical Side Panel (C)
- 1 - Hardware Package
 - 12 - #10- 16 x ½ Screw
 - 1 - Installation Instruction

Step 2:

Take vertical side panels (C) and assembly to the top panel (B).

Step 3:

Secure hail guard (A) in between clips on the vertical side panels and close clips to hold guard in position.

Step 4:

Remove support bracket screw at center front edge of condenser top.

Slip top flange of the assembled kit under the top pan of the unit and align left side with corner post of unit. Use the self-drilling screws supplied with kit to attach to the corner post and coil mounting panel.

Replace screw to support bracket at center front edge of condenser top.

Note:

If other than supplied screws are used ensure not to exceed ½" in length to prevent damage to the condenser coil.

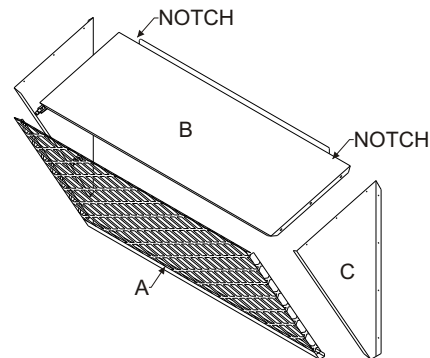


Figure 1

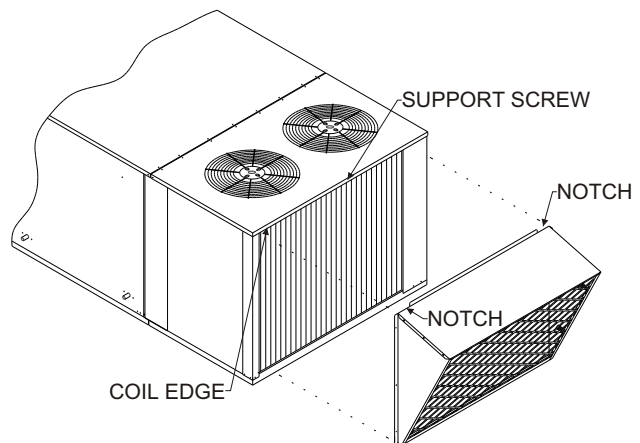


Figure 2

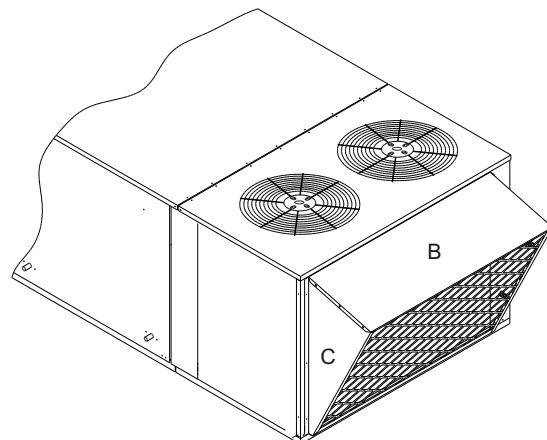


Figure 3