

WIRING DIAGRAM

012H


Notes :

- 1) See unit data label for recommended supply wire sizes.
- 2) Thermostat anticipator setting : 0.20 Amps
- 3) Secure 24V connections to thermostat wires with wire nuts and seal with approved electrical tape.
- 4) When using a relay box refer to the relay box installation wiring diagram for thermostat connections.
- 5) If any wire in this unit is to be replaced it must be replaced with 105° C thermoplastic copper wire of the same gauge.
- 6) Not suitable for use on systems exceeding 120V to ground



WARNING

Switch circuit breaker to the "off" position before servicing the furnace.

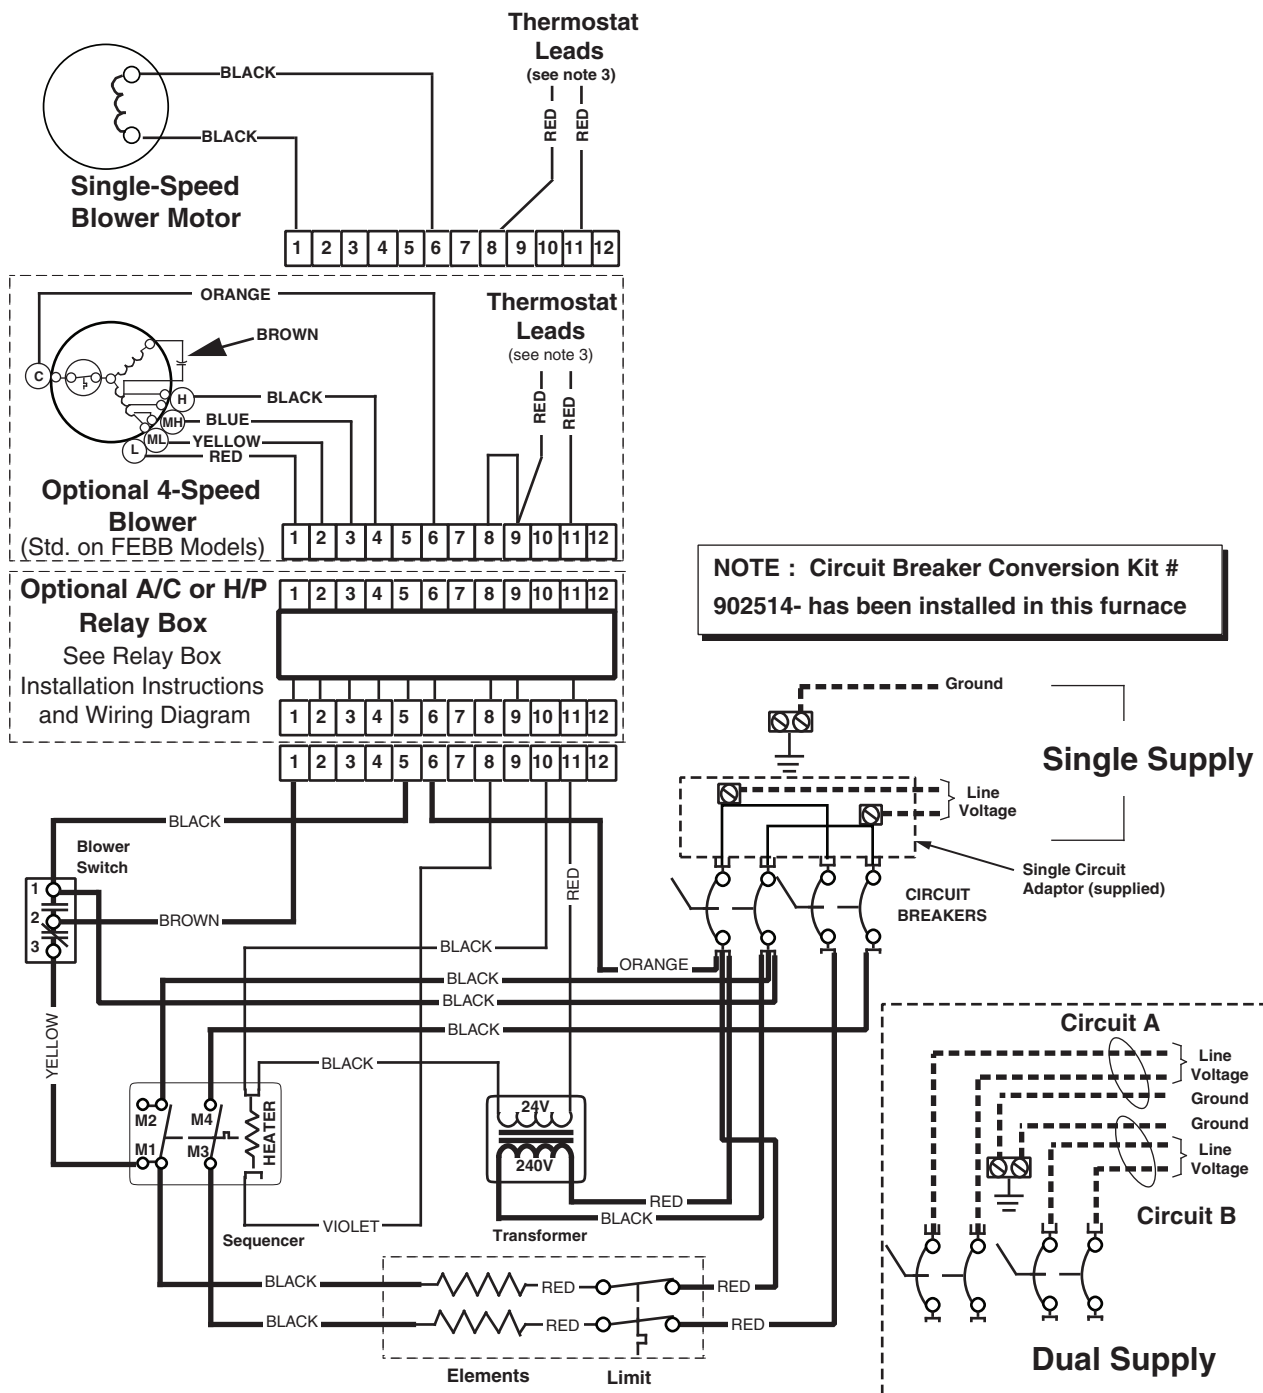

LEGEND:

FIELD WIRING	---
LOW VOLTAGE	—
HIGH VOLTAGE	—



703411A
(Replaces 7034110)

03/15