WIRING DIAGRAM

015H, 017H

Switch circuit breaker to the "off" position WARNING before servicing the furnace.

Notes:

- 1) See unit data label for recommended supply wire sizes.
- 2) Thermostat anticipator setting: 0.40 Amps
- 3) Secure 24V connections to thermostat wires with wire nuts and seal with approved electrical tape.
- 4) When using a relay box refer to the relay box installation wiring diagram for thermostat connections.
- 5) If any wire in this unit is to be replaced it must be replaced with 105° C thermoplastic copper wire of the same gauge.

