

Lau Blower Kit

INSTALLATION INSTRUCTIONS

For CMF Furnace Models

INSTALLATION SEQUENCE FOR BLOWER/MOTOR ASSEMBLY 903126

1. Remove existing blower by disconnecting wiring plug and removing the securing screws on the blower deck. Pull the blower assembly forward to remove.
2. Slide the new blower assembly into place by aligning the blower flanges with the lances in the deck.
3. Secure the blower housing to the deck with the securing screws.
- 4a. **If replacing a 3-speed blower:** Connect the wiring plug and proceed to Step 5.
- 4b. **If replacing a single-speed blower proceed as follows:** Connect the new blower wiring as shown in Figures 1 and 2. The black wire lead provided in the kit must be plugged into the appropriate receptacle for proper furnace operation. **NOTE:** Use care to select the correct wire location initially as the wire cannot be removed without special tools.
- CAUTION: Miswiring the blower motor can result in noisy operation or overheating.**
5. Using the wire tie provided bundle and tie up the wires as needed to prevent interference with the blower.

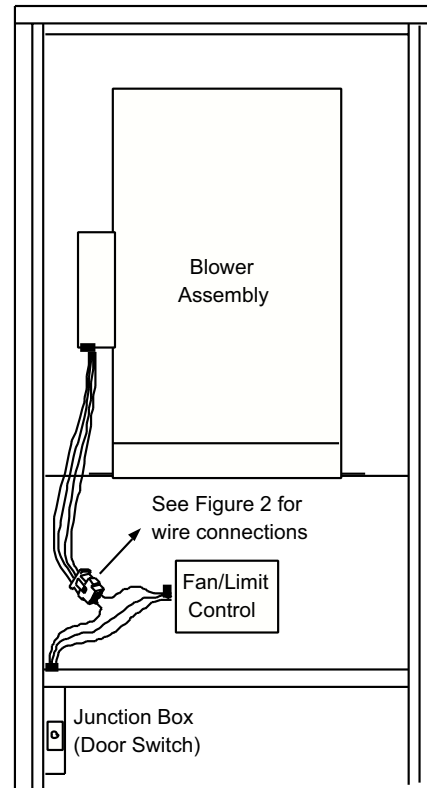


Figure 1. Blower Installation when Replacing a Single-Speed Blower

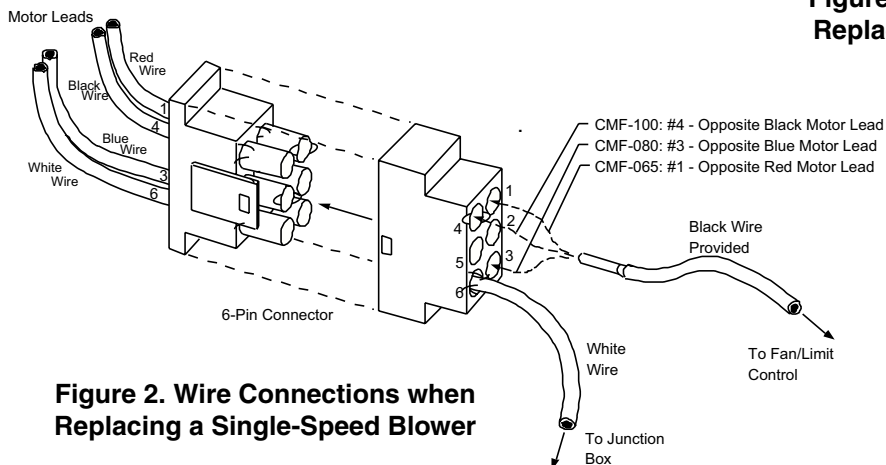


Figure 2. Wire Connections when Replacing a Single-Speed Blower

