WIRING DIAGRAM

208/240V, 3-Phase Electric Heater Kit

NOTES:

- Circuit breakers (When supplied) are not wired to heater kit by the factory, see Installation Instructions for wiring procedure.
- 2) If any of the original wire supplied with this unit must be replaced, it must be replaced with wiring material
- The installation of this heater kit may require a change in the blower speed tap connection. See Installation Instructions for details.
- 4) Aluminum or copper supply conductors are suitable.

