
WIRING DIAGRAM

(3Phase Power Only)

copper conductors only.

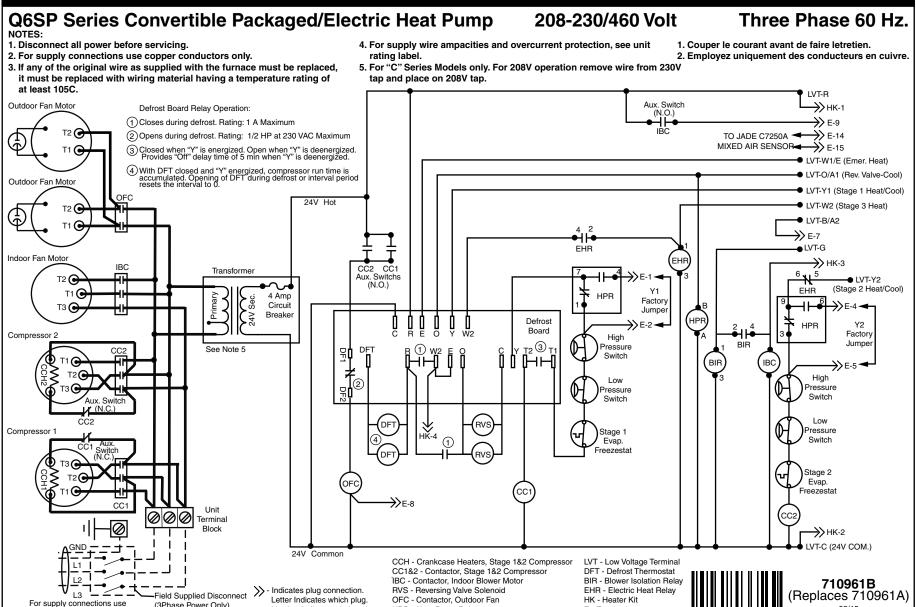

HPR - Heat Pump Relay

E - Economizer

Number indicates pin location.

02/15