


WIRING DIAGRAM

Wall Mount B6BW (8KW/10KW/036)

NOTES:

1. The blower motor speed tap connection may not be as shown. See the Installation Instructions.
2. Disconnect all power before servicing.

3. The transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
4. If the Internal wiring is replaced, use only 105°C copper wire of the same gauge.

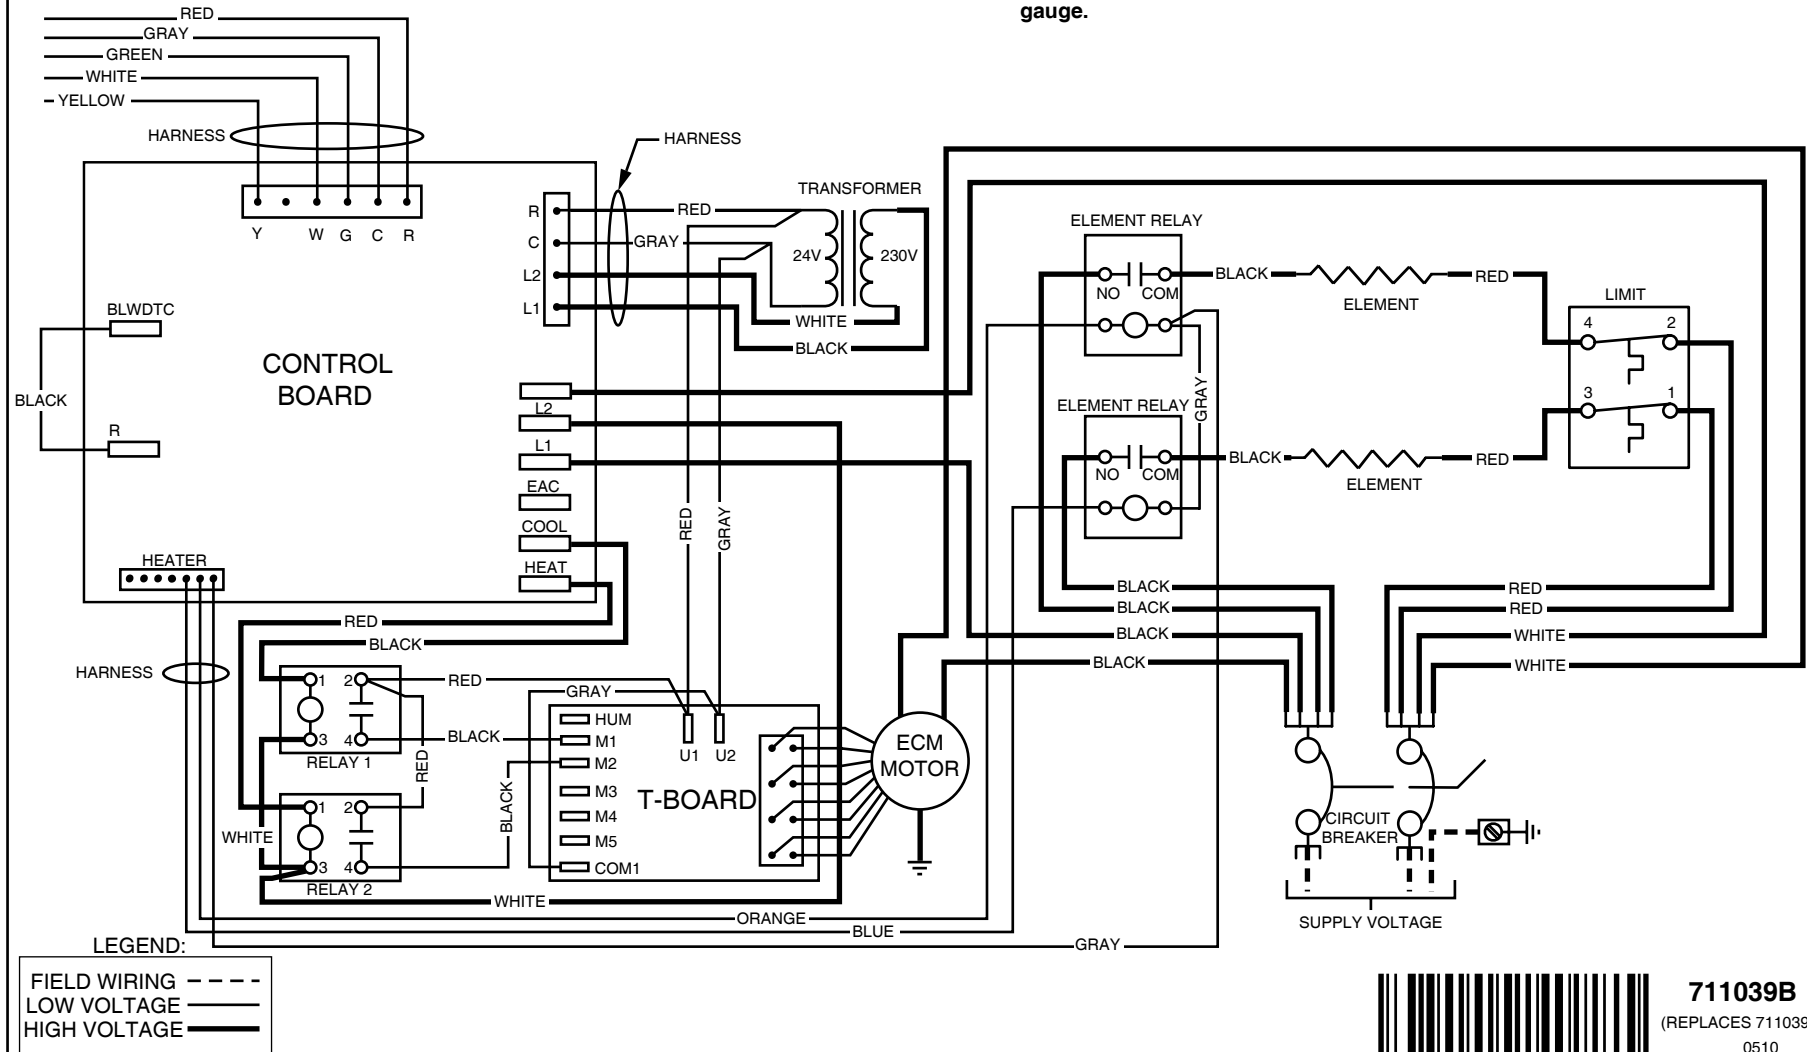

711039B

(REPLACES 711039A)

0510