


# WIRING DIAGRAM

## Air Handler with Fixed Speed High Efficiency Motor

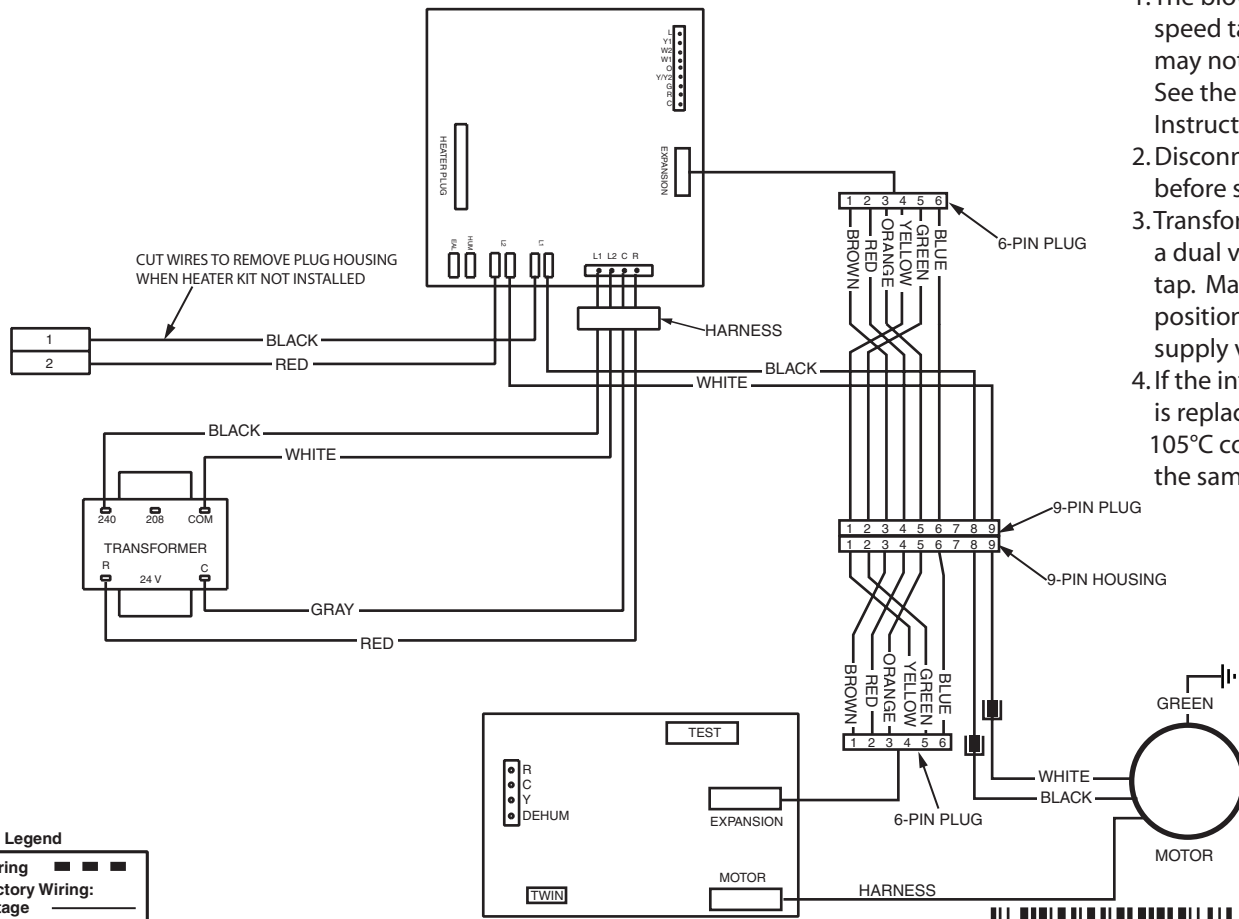

### NOTES:

1. The blower motor speed tap connection may not be as shown. See the Installation Instructions.
2. Disconnect all power before servicing.
3. Transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
4. If the internal wiring is replaced, use only 105°C copper wire of the same gauge.

### Legend

|                 |         |
|-----------------|---------|
| Field Wiring    | ■ ■ ■ ■ |
| Factory Wiring: | —       |
| Low Voltage     | —       |
| High Voltage    | —       |