

REPLACEMENT PARTS LIST

K & F Series Single Stage Condensing & Non-Condensing Furnaces

NON-CONDENSING GAS FURNACES 80+ AFUE



***G7SA-1 Upflow / Horizontal
Furnace**



***G7SK-1 Downflow
Furnace**

CONDENSING GAS FURNACES 92.1% THROUGH 95.0% AFUE



***G7SC-1 Upflow / Horizontal
Furnace**



***G7SL-1 Downflow
Furnace**



***G7SD-1 / G7SD-E
Upflow / Horizontal Furnace**



***G7SM-1 Downflow
Furnace**

80% + AFUE

*G7SA-1 Upflow / Horizontal - Replacement Parts List.....	2
*G7SA-1 Upflow / Horizontal - Component Location.....	3
*G7SK-1 Downflow - Replacement Parts List	4
*G7SK-1 Downflow - Component Location	5

92.1% THROUGH 95.0% AFUE

*G7SC-1 Upflow / Horizontal - Replacement Parts List.....	6
*G7SC-1 Upflow / Horizontal - Component Location.....	7
*G7SD-1 Upflow / Horizontal - Replacement Parts List.....	8
*G7SD-1 Upflow / Horizontal - Component Location.....	9
*G7SL-1 Downflow - Replacement Parts List.....	10
*G7SM-1 Downflow - Replacement Parts List.....	11
*G7SL-1 & *G7SM-1 Downflow - Component Location.....	12

*Model description may be prefixed with an alphanumeric character

 
***G7SA-1 UPFLOW / HORIZONTAL - REPLACEMENT PARTS LIST**

DESCRIPTION	054C-T23A1	072C-T24B1	090C-T24B1	108C-T35C1	126C-T45D1
Blower Housing	297200R	297207R	N/A	N/A	N/A
Blower Housing (with Wheel)	N/A	N/A	1027001R	1027002R	1027002R
Blower Limit Switch	626611	626611	626611	626611	626611
Blower Motor	1027377R	1027375R	1027378R	1027381R	1027382R
Blower Wheel	667251	667258	N/A	N/A	N/A
Burner Assembly	904820	904822	904824	904826	904828
Collector Pan (w Gasket)	1030014	1030015	1030016	1030017	905018
Burner Tube Manifold	664228	664229	664230	664231	664232
Control Board	1021573R	1021573R	1021573R	1021573R	1021573R
Door Set	904767	904768	904768	904769	904770
Door Switch	632693	632693	632693	632693	632693
Flame Sensor	632484	632484	632484	632484	632484
Fuse	632261	632261	632261	632261	632261
Gas Valve	624775	624775	624775	624775	624775
Heat Exchanger	904779	904780	904781	904868	904785
High Temperature Hose (Not Shown)	299152	299152	299152	299153	299154
Ignitor Assembly (Nitride)	921074	921074	921074	921074	921074
Igniter Bracket (Not Shown)	299261	299261	299261	299261	299261
Inducer Gasket (Not Shown)	689988	689988	689988	689988	689988
Inducer Motor	904999	904999	904999	904999	904999
Inshot Burner	661134	661134	661134	661134	661134
Main Air Limit	626617	626614	626616	626616	626613
Motor Choke	N/A	622340	622340	622340	622340
Motor Mount Kit	904980	904951	904907	904951	904951
Orifice (Natural Gas)	661047	661047	661047	661047	661047
Pressure Switch	632489	632488	632495	632495	632487
Roll-Out Limit Switch	626610	626610	626610	626610	626610
Set of Wires (Not Shown)	1027173	1028467	1028467	1027174	1027174
Top Panel	295911R	295912R	295912R	295913R	295914R
Transformer	622341	622341	622341	622341	622341

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 3.](#)

*G7SA-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

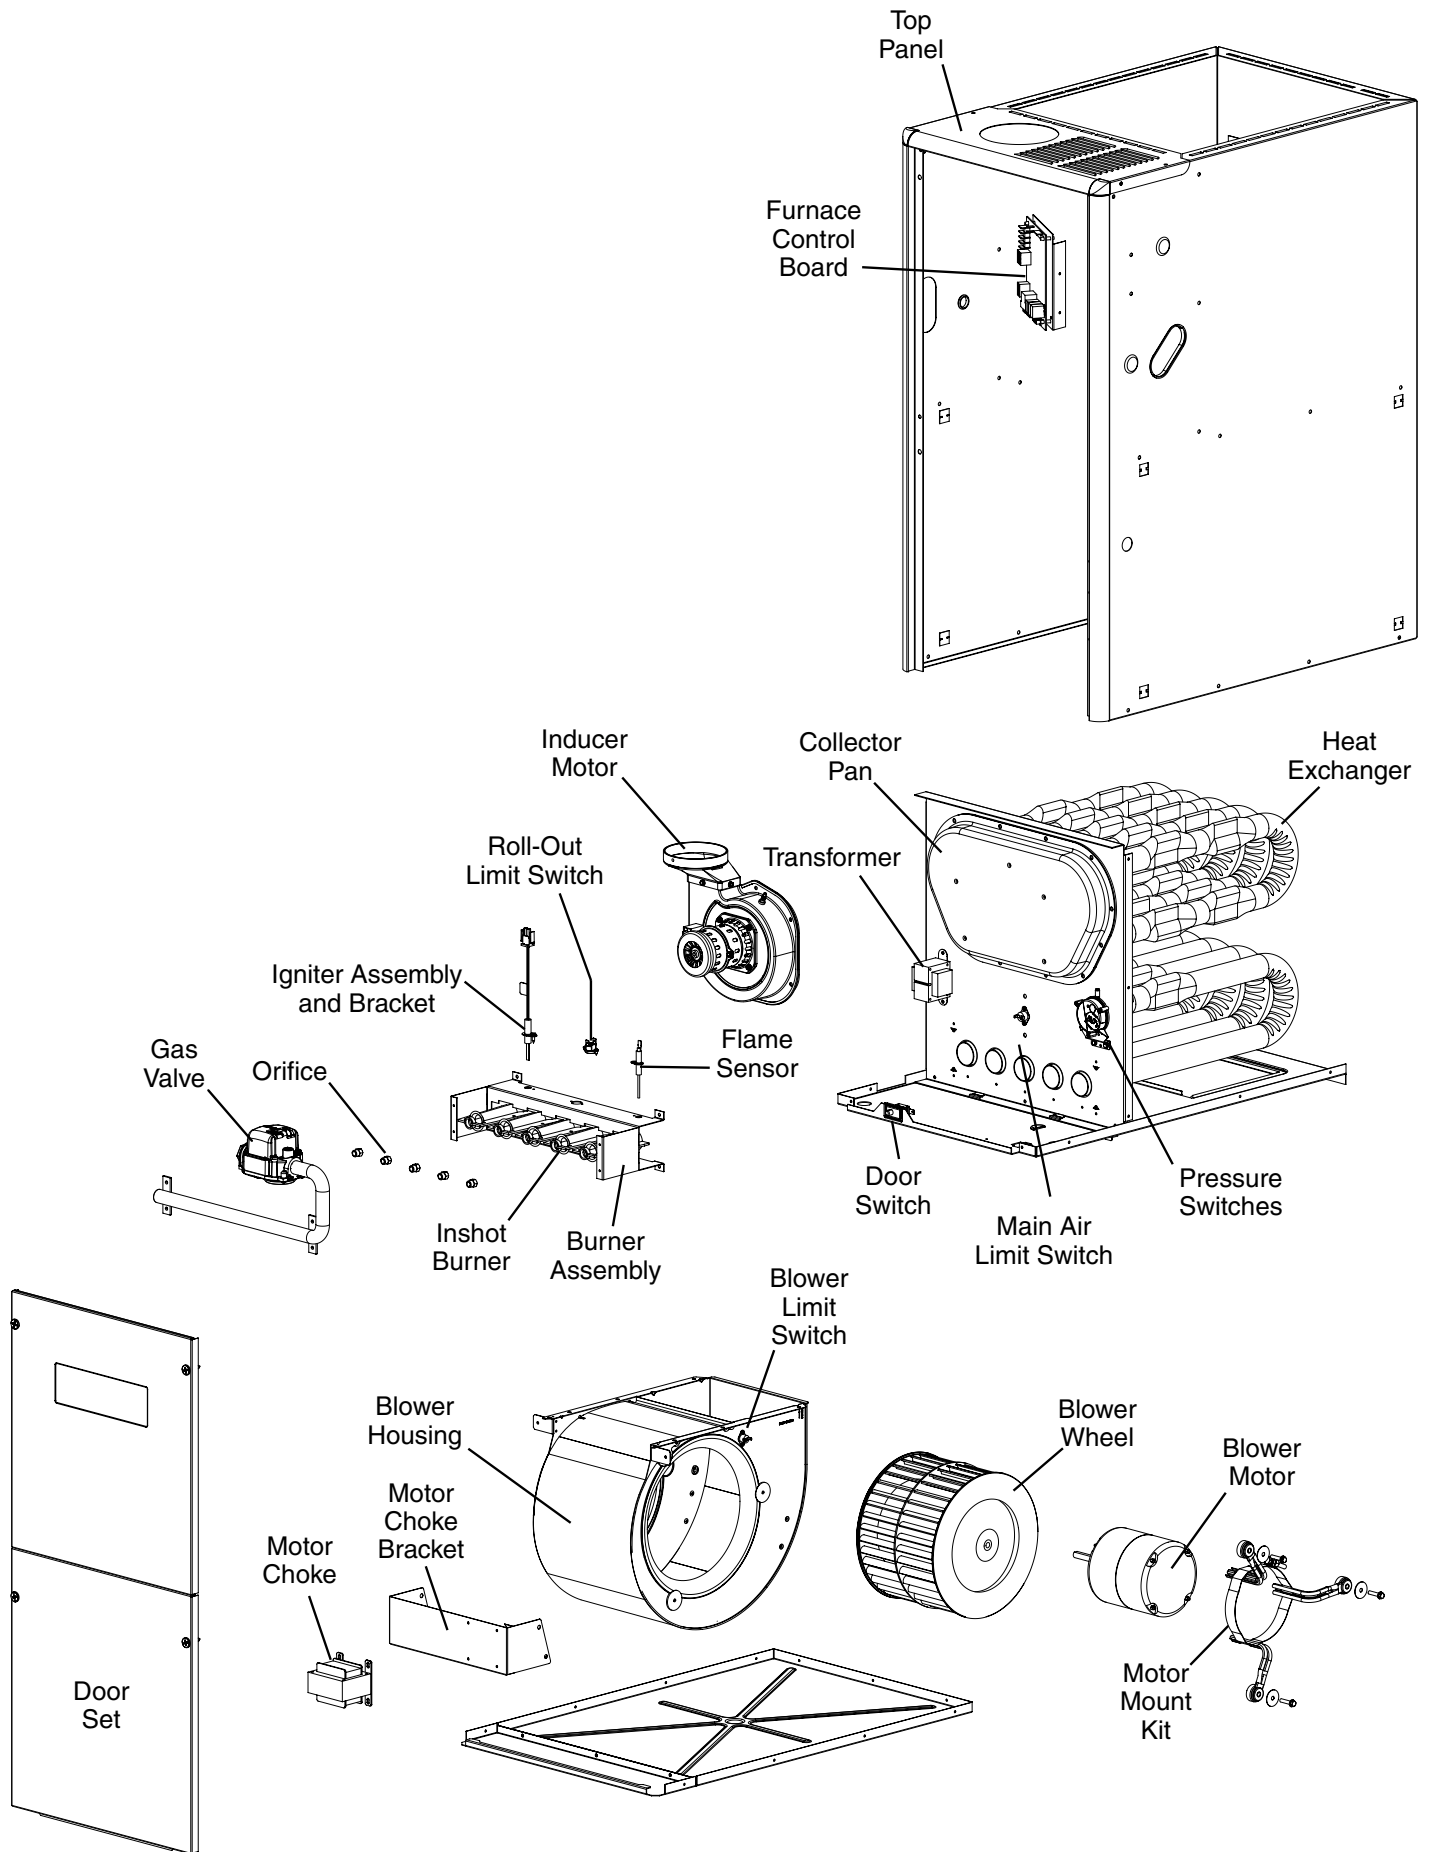


***G7SK-1 DOWNFLOW - REPLACEMENT PARTS LIST**

DESCRIPTION	054C-T23A1	090C-T24B1	108C-T35C1
Blower Housing	297200R	297207R	297209R
Blower Housing (with Wheel)	N/A	N/A	N/A
Blower Limit Switch	626611	626611	626611
Blower Motor	1027383R	1027385R	1027386R
Blower Wheel	667251	667258	1017727
Burner Assembly	904820	904824	904826
Burner Tube Manifold	664228	664230	664231
Collector Pan (w Gasket)	904901	904921	905017
Combustion Tube	299291	299291	299291
Control Board	1021573R	1021573R	1021573R
Door Set	904767	904768	904769
Door Switch	632693	632693	632693
Flame Sensor	632484	632484	632484
Fuse	632261	632261	632261
Gas Valve	624775	624775	624775
Heat Exchanger	904779	904781	904868
High Temperature Hose (Not Shown)	263967	263967	263967
Ignitor Assembly (Nitride)	921074	921074	921074
Igniter Bracket (Not Shown)	299261	299261	299261
Inducer Gasket (Not Shown)	689988	689988	689988
Inducer Motor	904999	904999	904999
Inshot Burner	661134	661134	661134
Main Air Limit Switch	626601	626617	626617
Motor Choke	N/A	622340	622340
Motor Mount Kit	904980	904951	904907
Orifice (Natural Gas)	661047	661047	661047
Pressure Switch	632488	632489	632488
Roll-Out Limit Switch	626610	626610	626609
Set of Wires (Not Shown)	1027175	1027176	1027177
Top Panel	295911R	295912R	295913R
Transformer	622341	622341	622341

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 5.

 *G7SK-1 DOWNFLOW - COMPONENT LOCATION

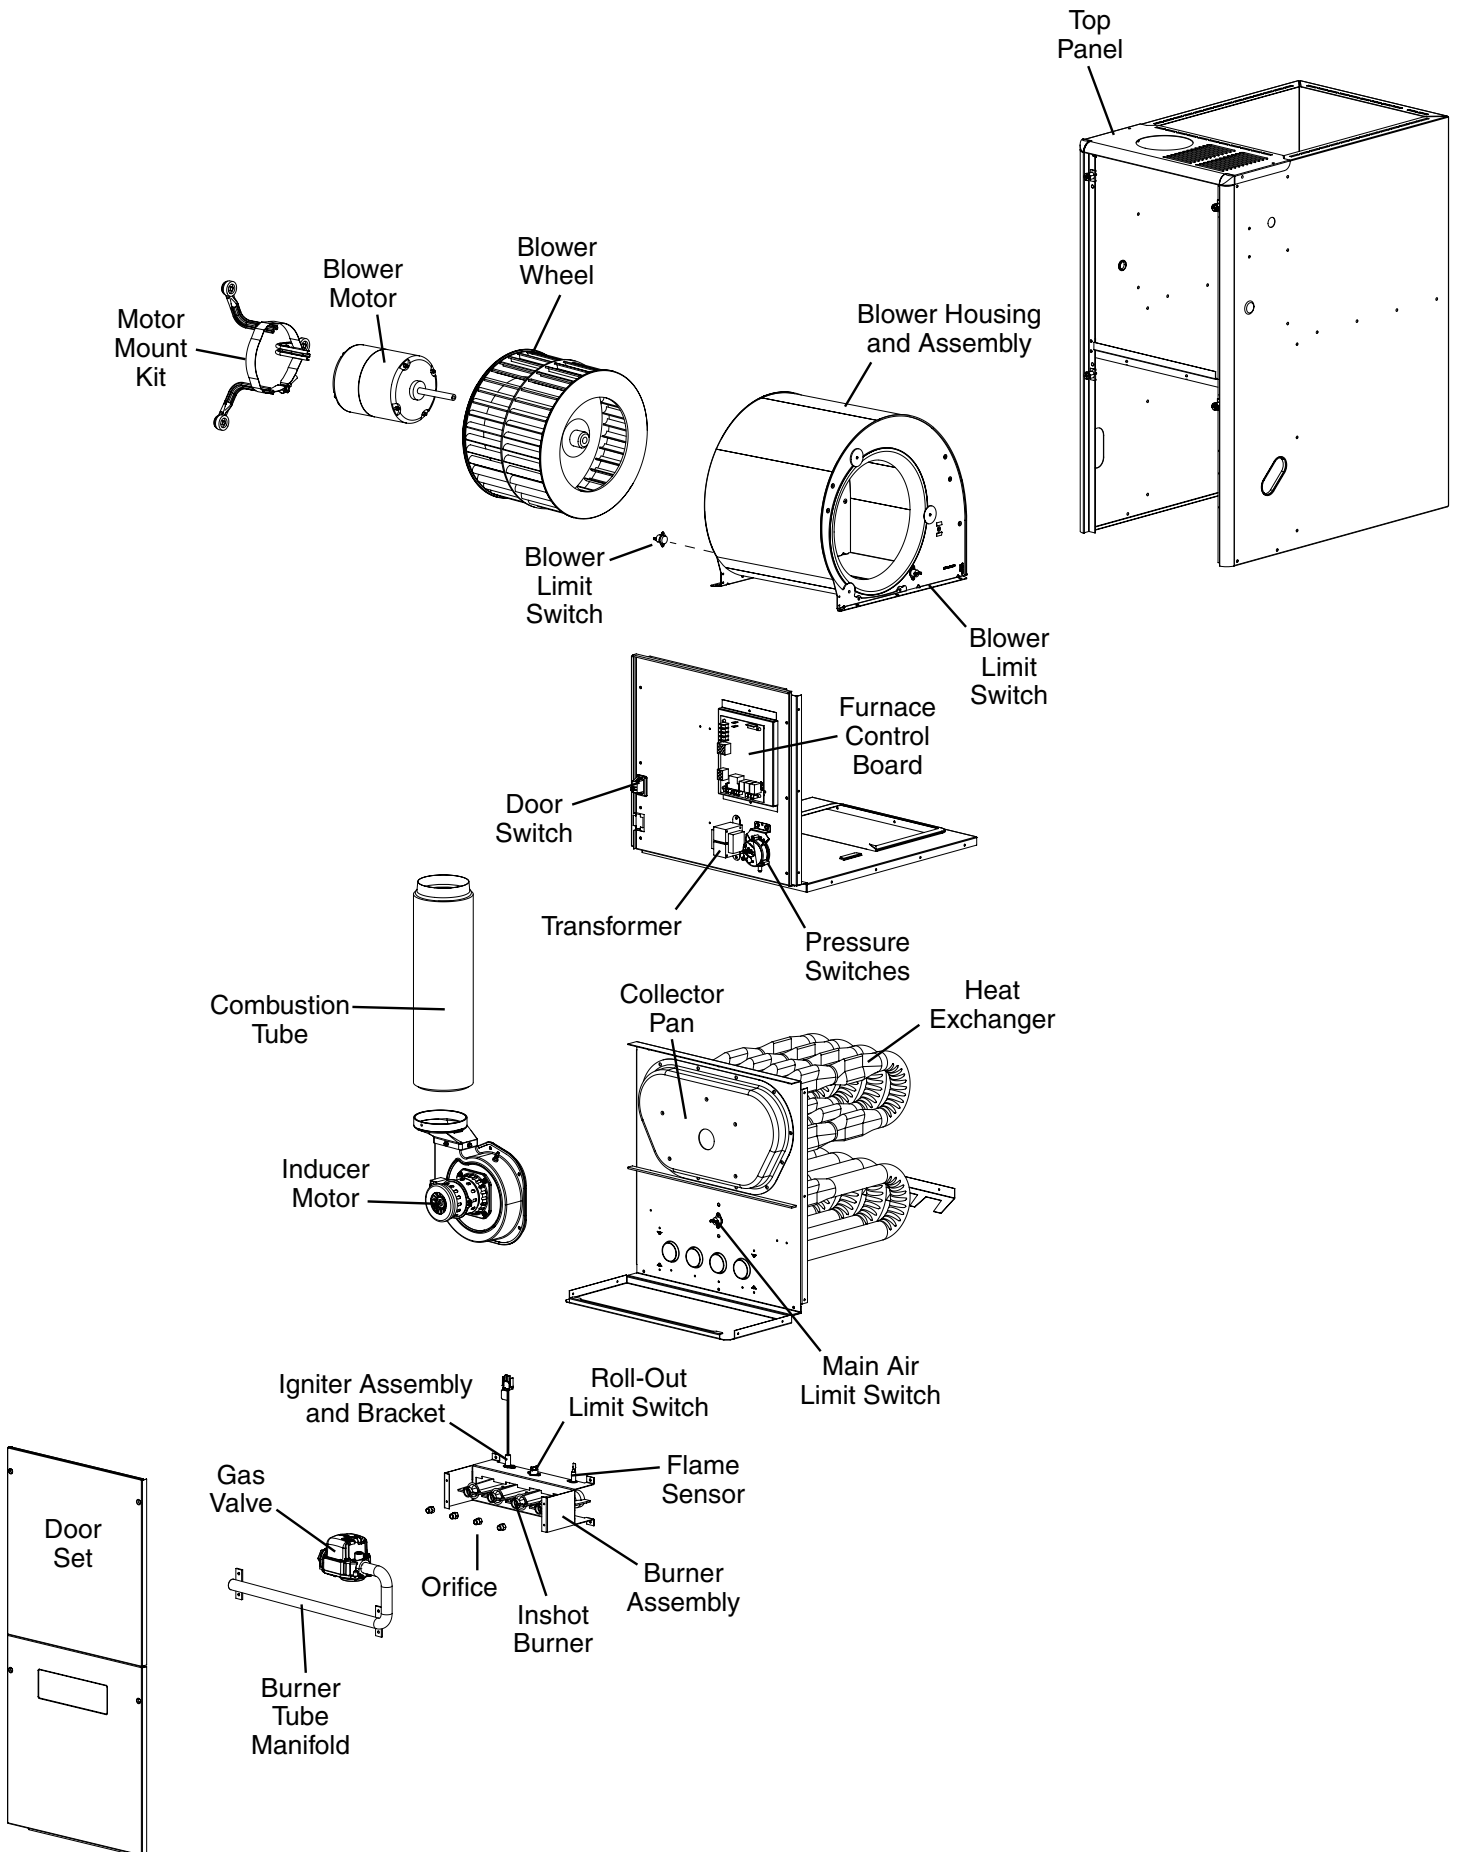


92.1% AFUE***G7SC-1 UPFLOW / HORIZONTAL - REPLACEMENT PARTS LIST**

DESCRIPTION	038D-T23A1	054D-T24B1	072D-T24B1	090D-T35C1
Blower Housing	297200R	297207R	297207R	N/A
Blower Housing (with Wheel)	N/A	N/A	N/A	1027002R
Blower Limit Switch	626611	626611	626611	626611
Blower Motor	1027388R	1027389R	1027390R	1027392R
Blower Wheel	667251	667258	667258	N/A
Burner Assembly	904818	904821	904823	904825
Burner Tube Manifold	664237	664238	664239	664240
Control Board	1021573R	1021573R	1021573R	1021573R
Door Set	904767	904768	904768	904769
Door Switch	632693	632693	632693	632693
Drain Tube (Hard, "J") (Not Shown)	663706	663706	663706	663706
Drain Tube (Soft, "J" 30") (Not Shown)	663707	663707	663707	663707
Finish Flange	664633	664633	664633	664633
Flame Sensor	632484	632484	632484	632484
Fuse	632261	632261	632261	632261
Gas Valve	624775	624775	624775	624775
Heat Exchanger	904786	904869	904788	904871
High Temperature Hose (Not Shown)	263967	263967	263967	263967
Ignitor Assembly (Nitride)	921074	921074	921074	921074
Igniter Bracket (Not Shown)	299261	299261	299261	299261
Inducer Limit Switch	626599	626599	626599	626599
Inducer Motor	1003441	1003441	1003441	1003441
Inducer Orifice	669749	669712	669713	669717
In-Line Drain Assembly	664435	664435	664435	664435
Inshot Burner	661134	661134	661134	661134
Main Air Limit Switch	626598	626614	626613	626613
Motor Choke	N/A	622340	622340	622340
Motor Mount Kit	904980	904951	904951	904951
Orifice (Natural Gas)	661045	661047	661047	661047
Outlet Header Box	904801	904802	904802	904803
Pressure Switch (Condensate)	1010439	632491	632622	632622
Pressure Switch (Inducer)		632495	632495	632493
Roll-Out Limit Switch	626608	626608	626609	626609
Set of Wires (Not Shown)	1027178	1027179	1027179	1027180
Top Panel	2B3551R	2B3552R	2B3552R	2B3553R
Transformer	622341	622341	622341	622341
Tube (Soft, 6.5") (Not Shown)	663727	663727	663727	663727

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 7.

 *G7SC-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

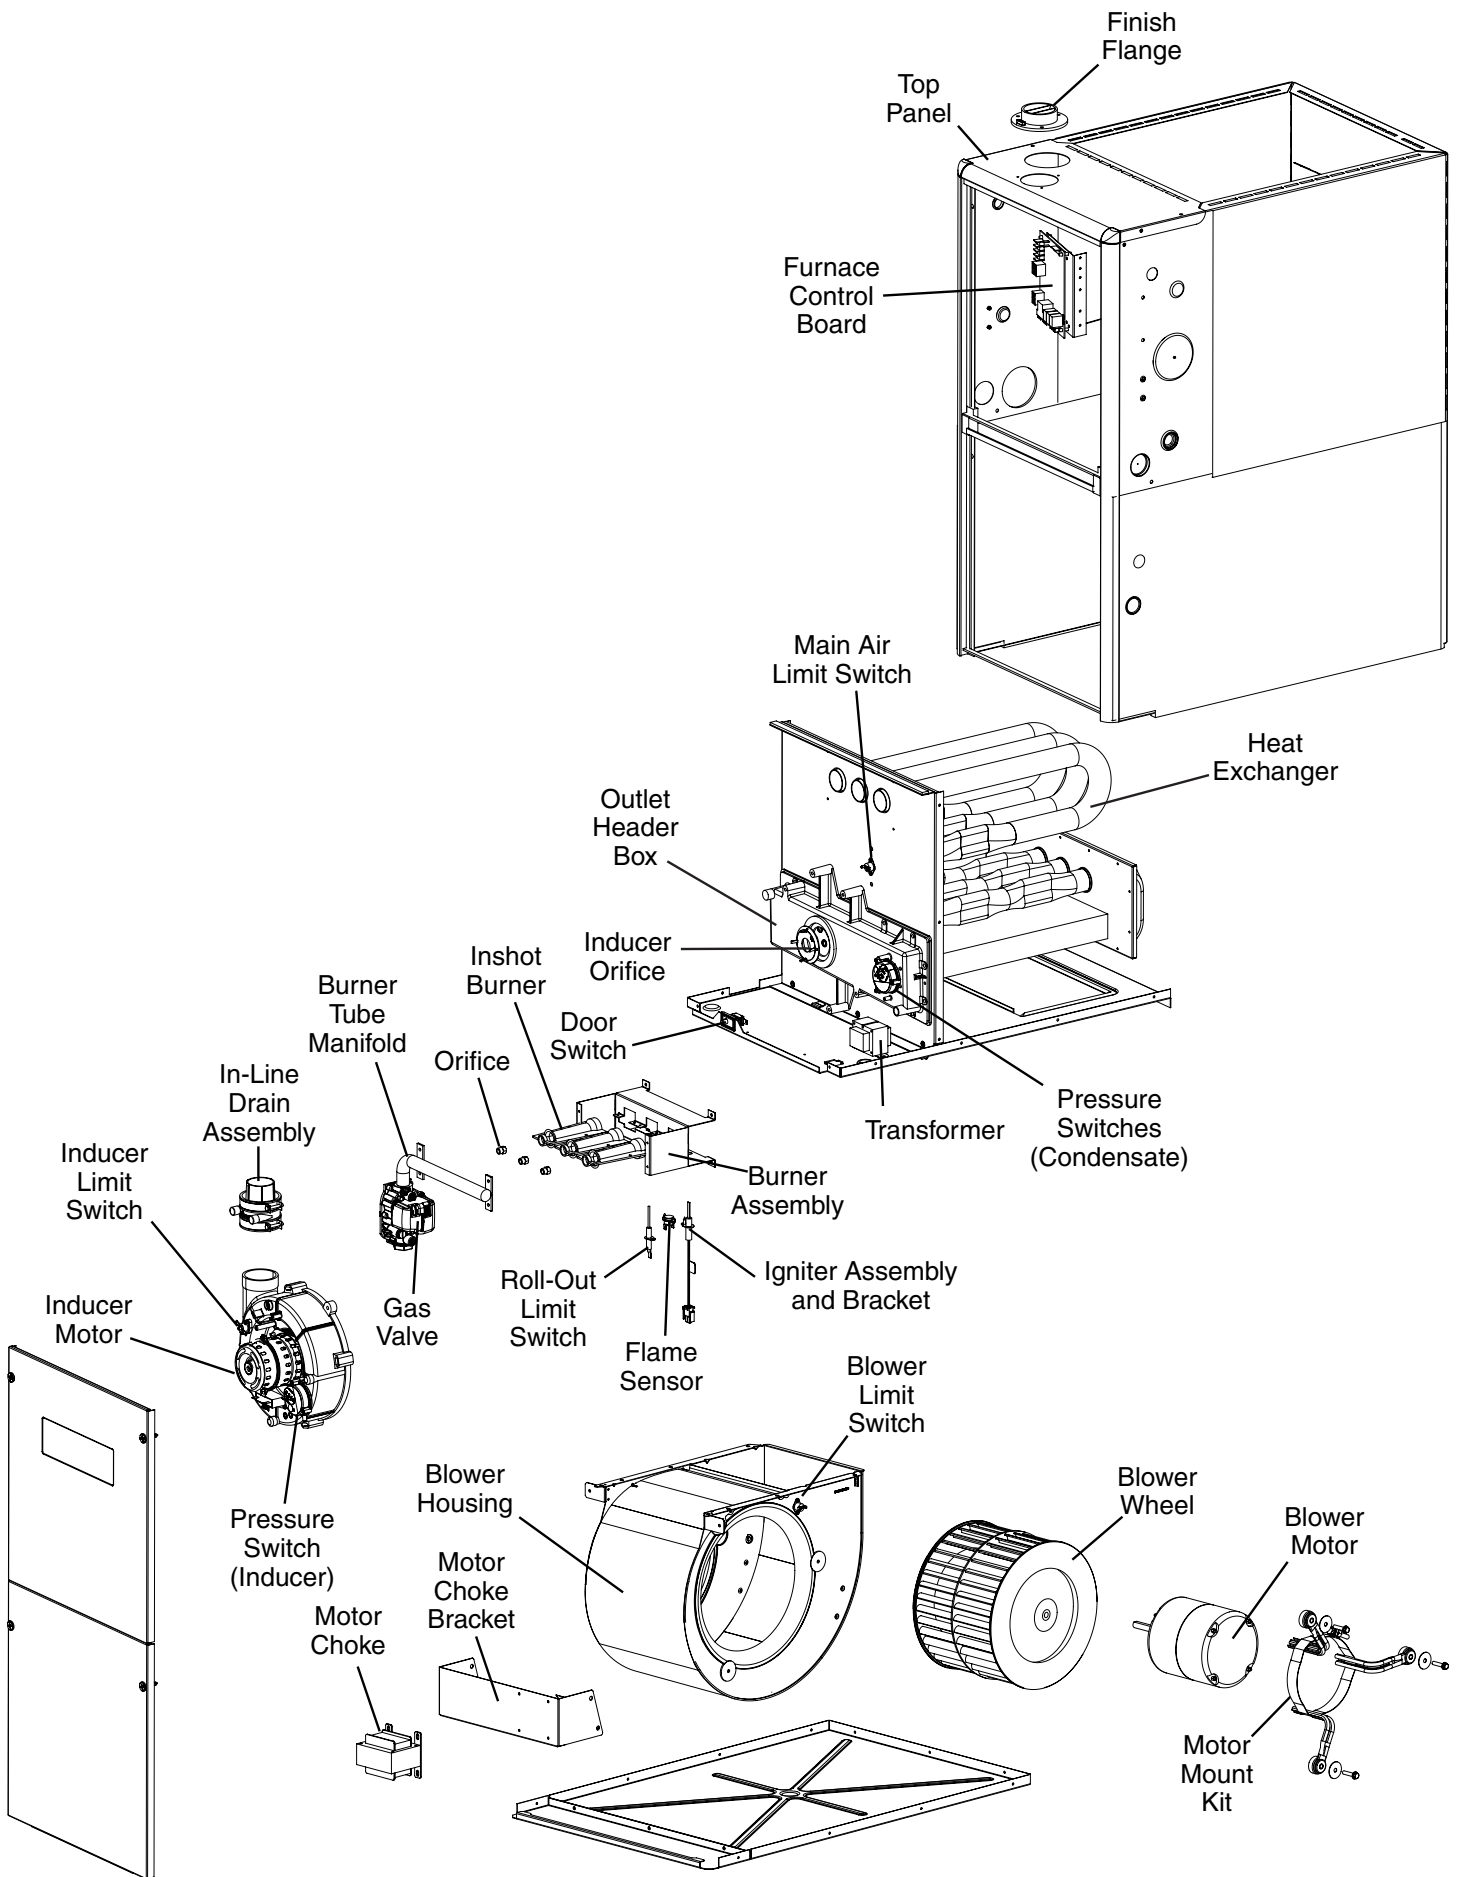


95.0% AFUE***G7SD-1 UPFLOW / HORIZONTAL - REPLACEMENT PARTS LIST**

DESCRIPTION	054D-T24B1
Blower Housing	297207R
Blower Housing (with Wheel)	N/A
Blower Limit Switch	626611
Blower Motor	1027396R
Blower Wheel	667258
Burner Assembly	905021
Burner Tube Manifold	664473
Control Board	1021573R
Door Set	904768
Door Switch	632693
Drain Tube (Hard, "J") (Not Shown)	663706
Drain Tube (Soft, "J" 30") (Not Shown)	663707
Finish Flange	664633
Flame Sensor	632484
Fuse	632261
Gas Valve	624775
Heat Exchanger	904792
High Temperature Hose (Not Shown)	263967
Ignitor Assembly (Nitride)	921074
Igniter Bracket (Not Shown)	299261
Inducer Limit Switch	626599
Inducer Motor	1003441
Inducer Orifice	669718
In-Line Drain Assembly	664435
Inshot Burner	661128
Main Air Limit Switch	626598
Motor Choke	622340
Motor Mount Kit	904951
Orifice (Natural Gas)	661047
Outlet Header Box	904802
Pressure Switch (Condensate)	632493
Pressure Switch (Inducer)	632487
PVC Trap(Not Shown)	664659
Roll-Out Limit Switch	626610
Set of Wires (Not Shown)	1027179
Top Panel	2A9512R
Transformer	622341
Tube (Soft, 6.5") (Not Shown)	663727

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 9.

 *G7SD-1 UPFLOW / HORIZONTAL - COMPONENT LOCATION

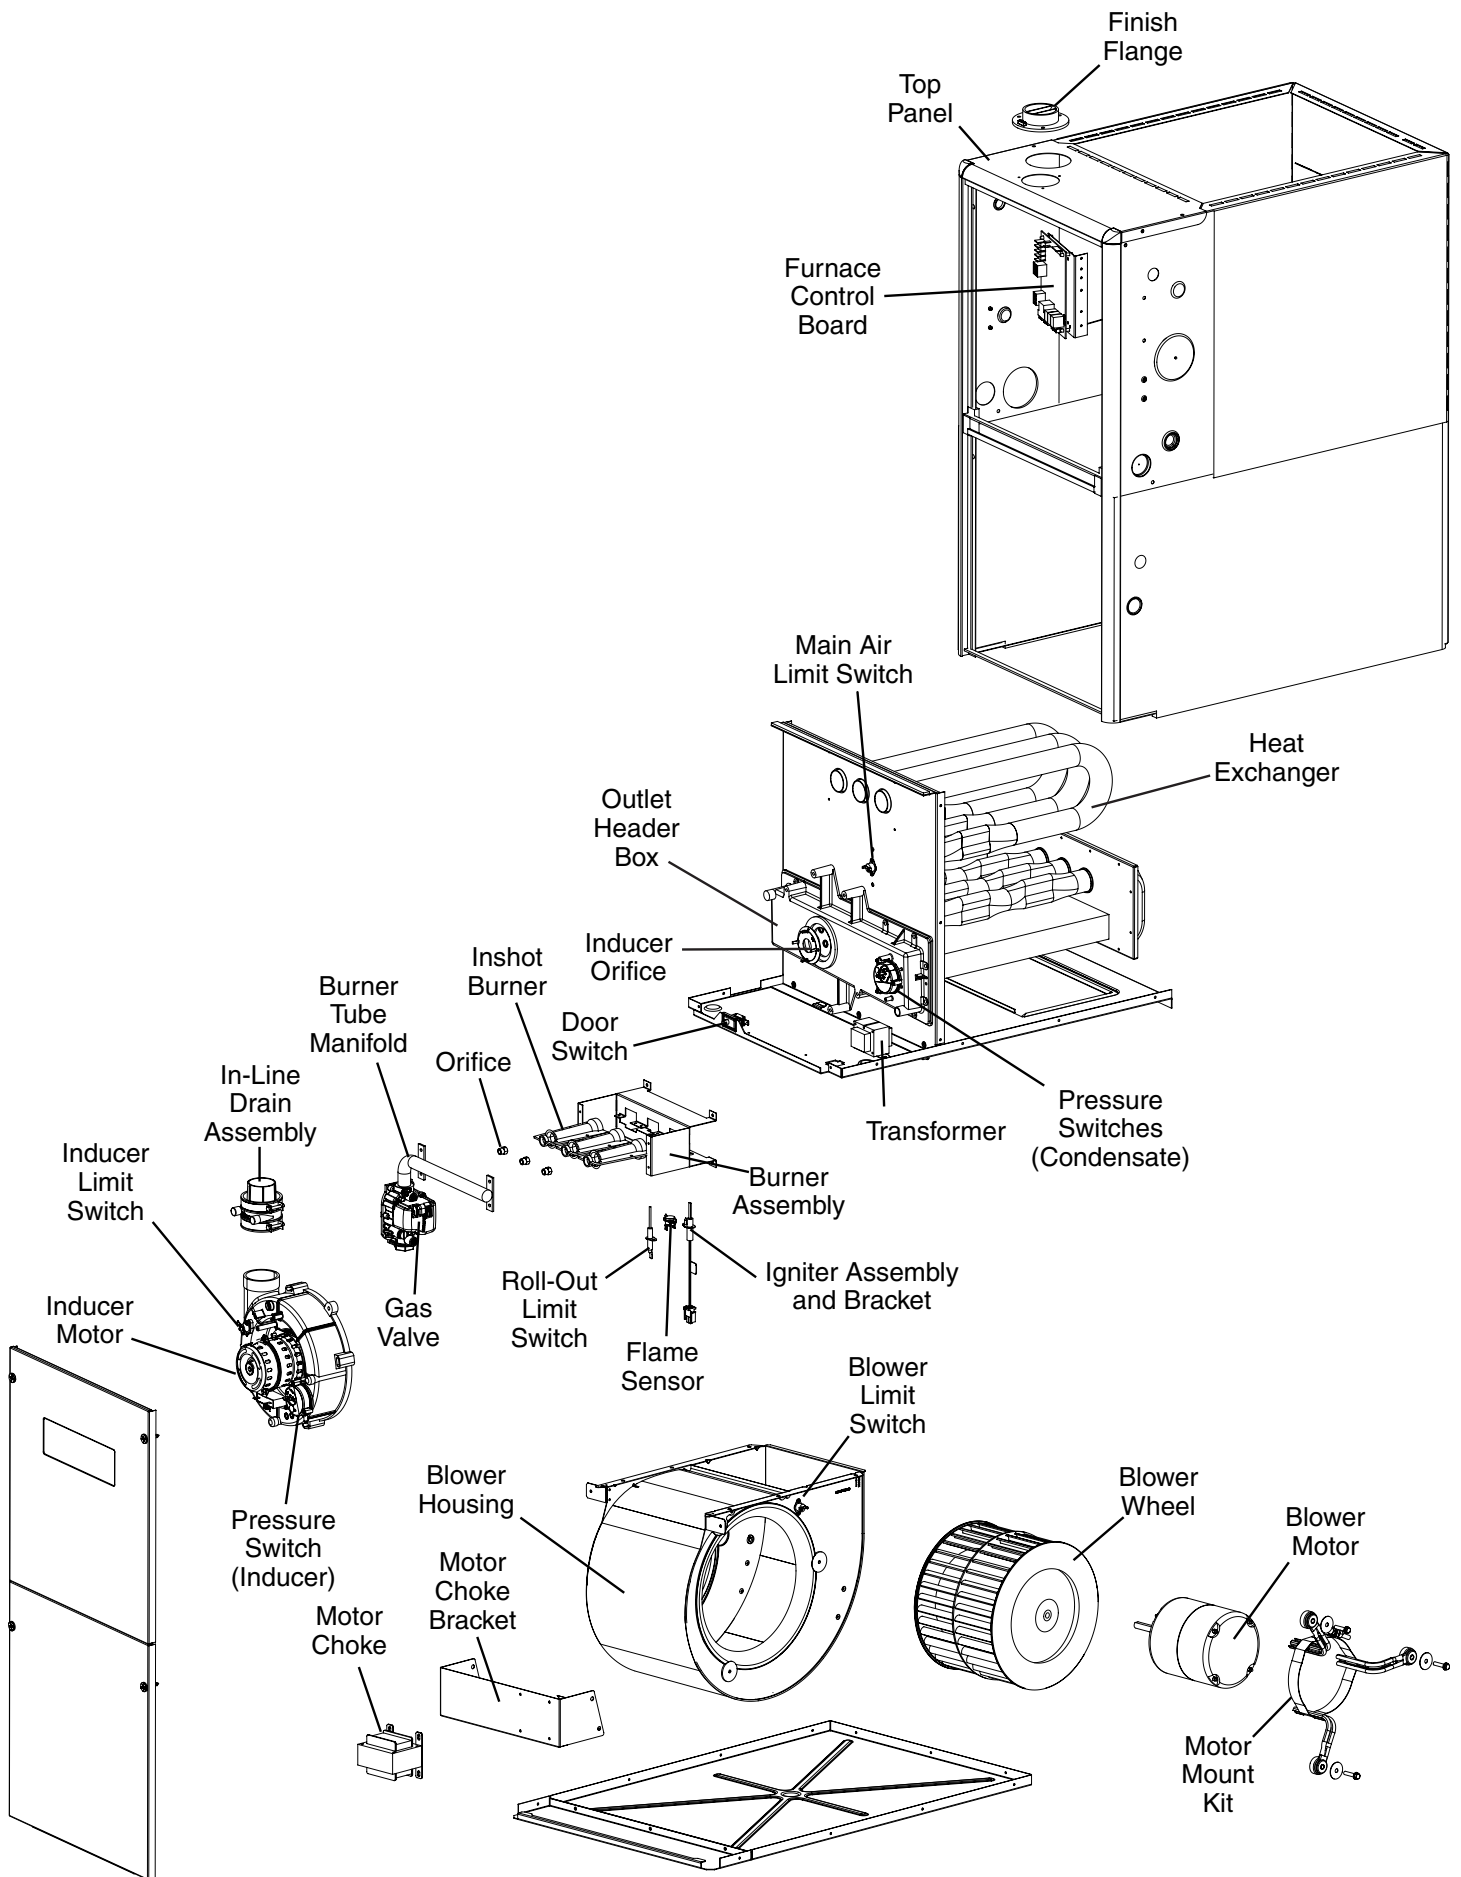

92.1% AFUE***G7SL-1 DOWNFLOW - REPLACEMENT PARTS LIST**

DESCRIPTION	072D-T24B1
Blower Housing	297207R
Blower Housing (with Wheel)	N/A
Blower Limit Switch	626611
Blower Motor	1029873R
Blower Wheel	667258
Burner Assembly	904823
Burner Tube Manifold	664239
Control Board	1021573R
Door Set	904768
Door Switch	632693
Drain Tube (Hard, "J") (Not Shown)	664426
Drain Tube (Soft, "J" 30") (Not Shown)	663707
Finish Flange	664633
Flame Sensor	632484
Fuse	632261
Gas Valve	624775
Heat Exchanger	904788
High Temperature Hose (Not Shown)	299154
Ignitor Assembly (Nitride)	921074
Igniter Bracket (Not Shown)	299261
Inducer Limit	626599
Inducer Motor	1003441
Inducer Orifice	669713
In-Line Drain Assembly	664435
Inshot Burner	661134
Main Air Limit Switch	626601
Motor Choke	622340
Motor Mount Kit	904951
Orifice (Natural Gas)	661047
Outlet Header Box	904802
Pressure Switch (inducer)	632487
Roll-Out Limit Switch	626610
Set of Wires (Not Shown)	1027181
Top Panel	2B3562R
Transformer	622341
Tube (Soft, 6.5") (Not Shown)	663727

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

[FOR COMPONENT LOCATIONS, SEE PAGE 12.](#)

95.0% AFUE***G7SM-1 DOWNFLOW - REPLACEMENT PARTS LIST**

DESCRIPTION	054D-T24B1	072D-T35C1
Blower Housing	297207R	297209R
Blower Housing (with Wheel)	N/A	N/A
Blower Limit Switch	626611	626611
Blower Motor	1029889R	1029890R
Blower Wheel	667374	1017727
Burner Assembly	905026	905022
Burner Tube Manifold	664611	664243
Control Board	1021573R	1021573R
Door Set	904768	904769
Door Switch	632693	632693
Drain Tube (Hard, "J") (Not Shown)	664426	664426
Drain Tube (Soft, "J" 30") (Not Shown)	663707	663707
Finish Flange	664633	664633
Flame Sensor	632484	632484
Fuse	632261	632261
Gas Valve	624775	624775
Heat Exchanger	904792	904793
High Temperature Hose (Not Shown)	299155	299155
Ignitor Assembly (Nitride)	921074	921074
Igniter Bracket (Not Shown)	299261	299261
Inducer Limit Switch	626599	626599
Inducer Motor	1003441	1003441
Inducer Orifice	669718	669719
In-Line Drain Assembly	664435	664435
Inshot Burner	661128	661128
Main Air Limit Switch	626601	626617
Motor Choke	622340	622340
Motor Mount Kit	904951	904951
Orifice (Natural Gas)	661047	661047
Outlet Header Box	904802	904803
Pressure Switch (inducer)	632487	632487
Roll-Out Limit Switch	626610	626610
Set of Wires (Not Shown)	1027181	1027182
Top Panel	2B3562R	2B3563R
Transformer	622341	622341
Tube (Soft, 6.5") (Not Shown)	663727	663727

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

FOR COMPONENT LOCATIONS, SEE PAGE 12.

*G7SL-1 & *G7SM-1 DOWNFLOW - COMPONENT LOCATION

