


REPLACEMENT PARTS LIST

**MG2S DOWNFLOW
TWO STAGE CONDENSING GAS FURNACE
96+% AFUE**

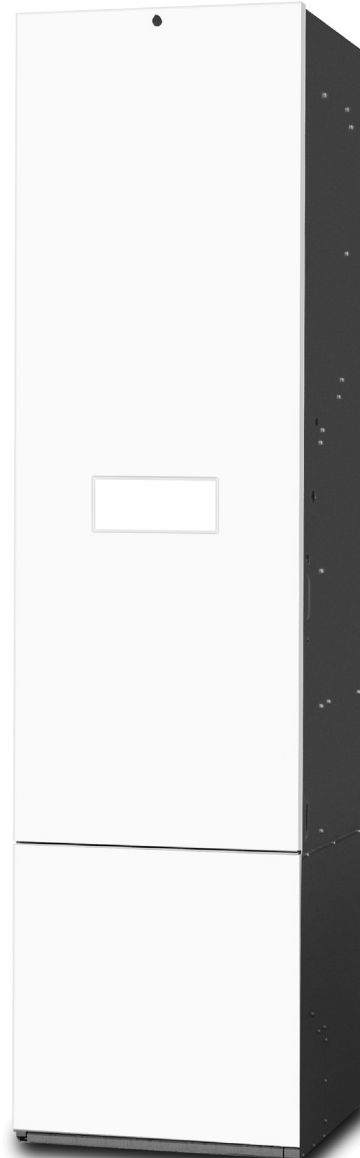

**Front Return
with Coil Box**



**Top Return
with Coil Box**

MG2S REPLACEMENT PARTS LIST

ITEM	DESCRIPTION	MG2S SERIES GAS FURNACE					
		MG2S-B045 F2ABM1	MG2S-B045 T2ABM1	MG2S-B060 F2ABM1	MG2S-B060 T2ABM1	MG2S-B072 F2ABM1	MG2S-B072 T2ABM1
1	Blower Control Board	920920	920920	920920	920920	920920	920920
2	Blower Deck Limit (Not Shown)	626602R	626602R	626602R	626602R	626602R	626602R
3	Blower Housing	297217R	297217R	297217R	297217R	297217R	297217R
4	Blower Motor	622684	622684	622684	622684	622684	622684
5	Blower Motor Mount Kit	904951	904951	904951	904951	904951	904951
6	Blower Wheel	667258R	667258R	667258R	667258R	667258R	667258R
7	Burner Box Assembly (Not Shown)	922017	922017	922018	922018	1022918R	1022918R
8	Burner Tube Manifold	664639R	664639R	664639R	664639R	664640R	664640R
9	Burner View Port (Not Shown)	632216R	632216R	632216R	632216R	632216R	632216R
10	Coil Door Assembly	104852601R	104852601R	104852601R	104852601R	104852601R	104852601R
11	Door Assembly	104855805R	104855806R	104855805R	104855806R	104855805R	104855806R
12	Door Latch (Coil Door) (Not Shown)	668420R	668420R	668420R	668420R	668420R	668420R
13	Door Latch Assembly (Furnace Door)	1036349R	1036349R	1036349R	1036349R	1036349R	1036349R
14	Door Strike (Coil Door) (Not Shown)	1018719	1018719	1018719	1018719	1018719	1018719
15	Door Switch	632337R	632337R	632337R	632337R	632337R	632337R
16	Drain Tee (Not Shown)	618060R	618060R	618060R	618060R	618060R	618060R
17	Drain Tube (Hard "J") (Not Shown)	663706R	663706R	663706R	663706R	663706R	663706R
18	Drain Tube (Soft, 23") (Not Shown)	664434R	664434R	664434R	664434R	664434R	664434R
19	Drain Tube (Soft, 42") (Not Shown)	664278R	664278R	664278R	664278R	664278R	664278R
20	Filter (Not Shown)	669363R	669779R	669363R	669779R	669363R	669779R
21	Filter Retainer Wire (Not Shown)	669065R	669955	669065R	669955	669065R	669955
22	Flame Sensor	903600	903600	903600	903600	903600	903600
23	Furnace Control Board	920916A	920916A	624790R	624790R	624790R	624790R
24	Fuse (Not Shown)	632261R	632261R	632261R	632261R	632261R	632261R
25	Gas Valve	921691	921691	921691	921691	921691	921691
26	Heat Exchanger (Not Shown)	921597	921597	921597	921597	921598	921598
27	High Temp Hose (Not Shown)	263967R	263967R	263967R	263967R	263967R	263967R
28	Igniter	1046527S	1046527S	1046527S	1046527S	1046527S	1046527S
29	Inducer Limit (Not Shown)	626599R	626599R	626599R	626599R	626599R	626599R
30	Inducer Motor With Orifice	1025335	1025335	1025335	1025335	1025335	1025335
31	Inducer Orifice (Not Shown)	670012R	1023976R	669749R	669718R	669719R	1021493R
32	Inline Drain Assembly	664435R	664435R	664435R	664435R	664435R	664435R
33	Inshot Burner	661135R	661135R	661135R	661135R	661135R	661135R
34	Main Air Limit Switch	626600R	626617R	626615R	626617R	626612R	626618R
35	Orifice (LP Gas)	661049R	661049R	661045R	661045R	661047R	661047R
	Orifice (Natural Gas)	661078R	661078R	661082R	661082R	661079R	661079R
36	Outlet Header Box	904802	904802	904802	904802	904802	904802
37	Pressure Switch	1023972R	1023971R	1023972R	1023973R	1023972R	1023971R
38	Rollout Limit Switch	626608R	626608R	626608R	626608R	626608R	626608R
39	Set Of Wires (Not Shown)	1021547R	1021547R	1021547R	1021547R	1021547R	1021547R
40	Transformer	622341R	622341R	622341R	622341R	622341R	622341R
41	Vent Pipe	664644R	664644R	664644R	664644R	664644R	664644R
42	Combustion Air Inlet Pipe	664645R	664645R	664645R	664645R	664645R	664645R

Please specify the correct Model No., Serial No, and part number(s) when ordering parts from the nearest authorized dealer or service center.

MG2S Gas Furnace Component Location

