WIRING DIAGRAM

Models: E2EH-012HB, 015HB

⚠ WARNING

Switch circuit breakers to the "off" position before servicing the furnace.

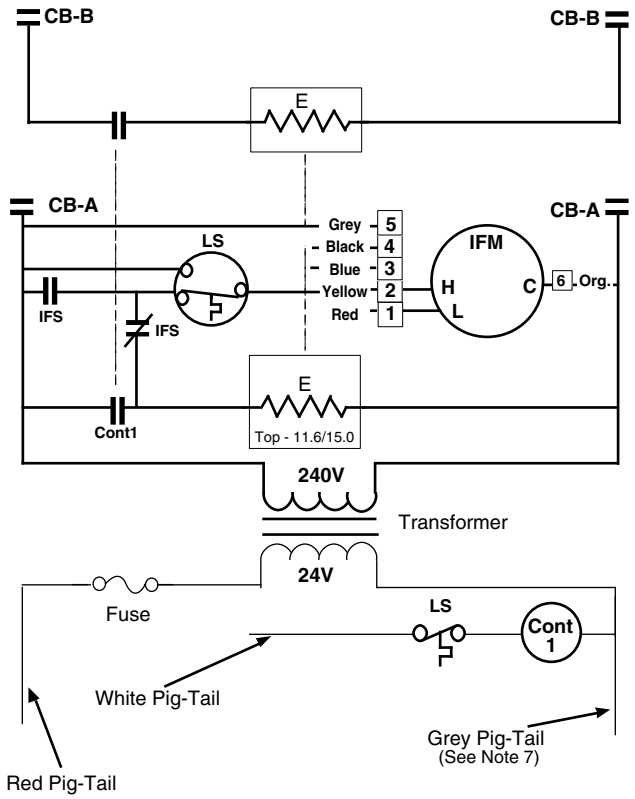

Notes :

1) See unit data label for recommended supply wire sizes.
2) Thermostat anticipator setting : 0.30 Amps
3) To change blower speed on units without a relay box installed refer to installation instructions
4) Refer to furnace and/or relay box installation instructions for thermostat connections.
5) If any wire in this unit is to be replaced it must be replaced with 105°C thermoplastic copper wire of the same gauge.
6) Not suitable for use on systems exceeding 120V to ground.
7) This wire is used with some accessories. See accessory Installation Instructions for further detail.
8) Refer to Installation Instructions for complete wiring diagram.

Legend:

CB = Circuit Breaker
E = Heater Element
IFS = Fan Switch
IFM = Fan Motor
Cont = Contactor
LS = Limit Switch
□ **= Fan Plug**
◇ **= Control Plug**

7103120 (Replaces 7101720)