WIRING DIAGRAM

Air Handler

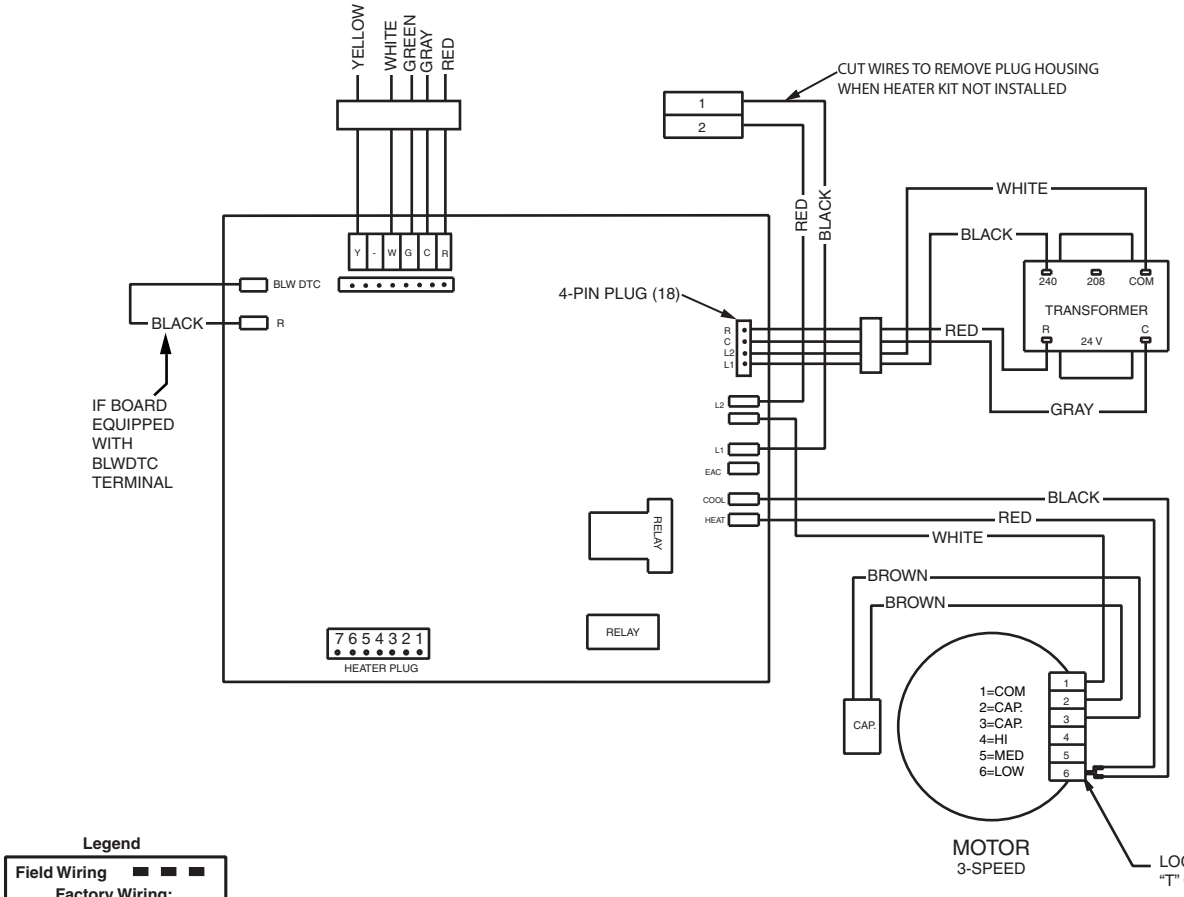

Legend

Field Wiring	▬ ▬ ▬
Factory Wiring:	
Low Voltage	———
High Voltage	———

NOTES:

1. The blower motor speed tap connection may not be as shown. See the Installation Instructions.
2. Disconnect all power before servicing.
3. Transformer may have a dual voltage primary tap. Match the tap position with the supply voltage used.
4. If the internal wiring is replaced, use only 105°C copper wire of the same gauge.

711075A
(Replaces 7110750)
1009