

INSTALLATION INSTRUCTIONS

PVC Isolation Kit 904063

IMPORTANT:

Read these instructions and the M3RL Installation Instructions carefully for general installation requirements before beginning the installation.

NOTE:

This installation Instructions has been written based on furnace not installed.

Contents of Kit:

- 1.3" diameter PVC isolation tube – 2 pcs.
- 2.Installation Instructions.

Installing the kit: (See Figure 1)

- 1.Slide the 3" diameter PVC isolation tube (rear most) on the PVC vent pipe through the top panel hole and fit 2" to 3" transition boot on vent pipe until it touches isolation tube.
- 2.Tighten hose clamp on 2" to 3" rubber connection boot. Note: Please verify that the hose clamp is tightened well to prevent leaking flue gas and condensate.
- 3.Repeat steps #1-#2 for the combustion air intake (front most) pipe.

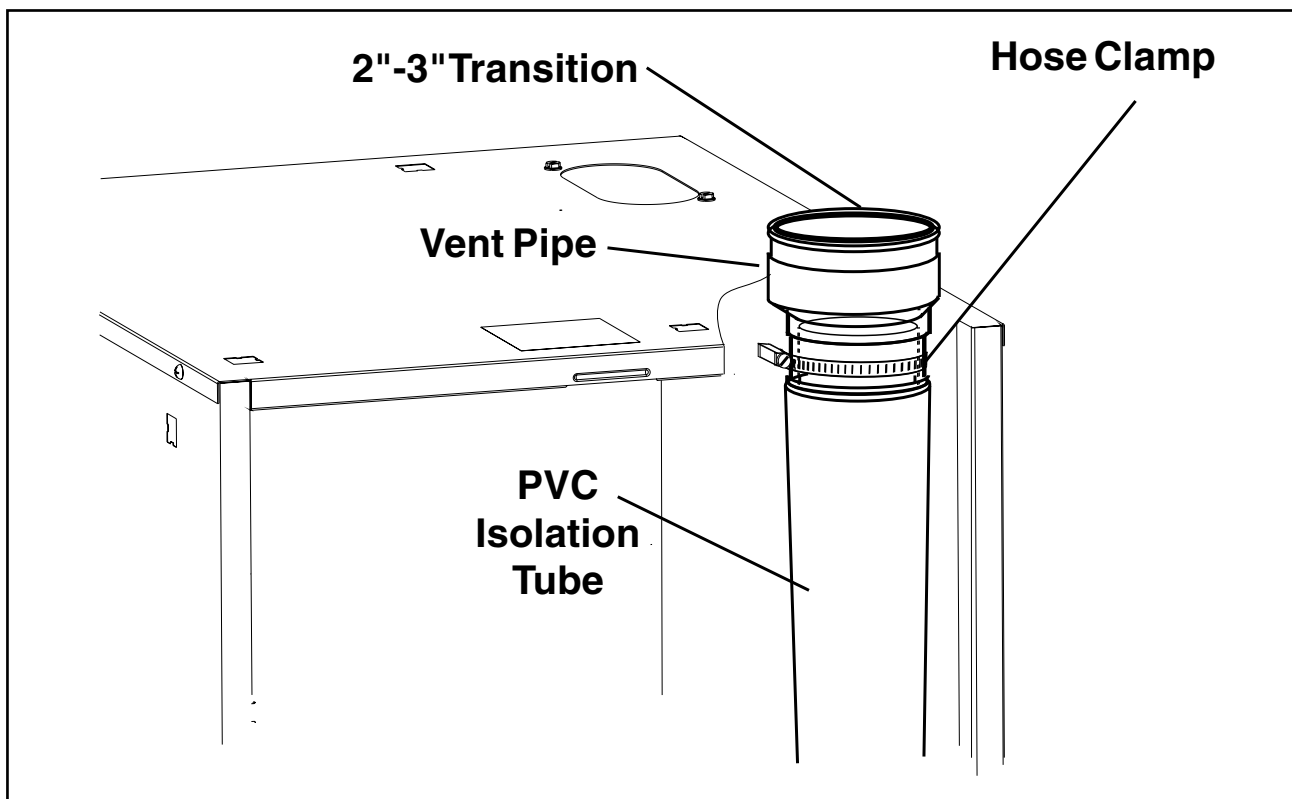


Figure 1. PVC Isolation Tube Assembly

