


# TECHNICAL SPECIFICATIONS



High Efficiency / 90+ AFUE Direct Vent or Non Direct Vent Condensing Furnace

- M1200 12 YEAR ALL PARTS LIMITED WARRANTY
- M1200 WITH UPGRADED WARRANTY PACKAGE -12 YEAR ALL PARTS & LABOR LIMITED WARRANTY
- Both the standard and upgraded limited warranty packages offer a 12 Year Dependability Promise to replace the entire unit, if the unit's major component (heat exchanger or compressor) fails within the first 12 years of operation, to the original owner. All split system products must be installed with a matched indoor air handler or indoor coil to qualify.
- Product registration (by consumer or dealer) required for 12-year Warranty and Dependability Promise within a limited period of time after the installation. See current warranty document for details. This can be viewed at www.maytaghvac.com or ask your sales representative.
- Dealer is responsible for registration of labor portion of warranty.
- Also when registered, this product is upgraded to a limited lifetime heat exchanger warranty.

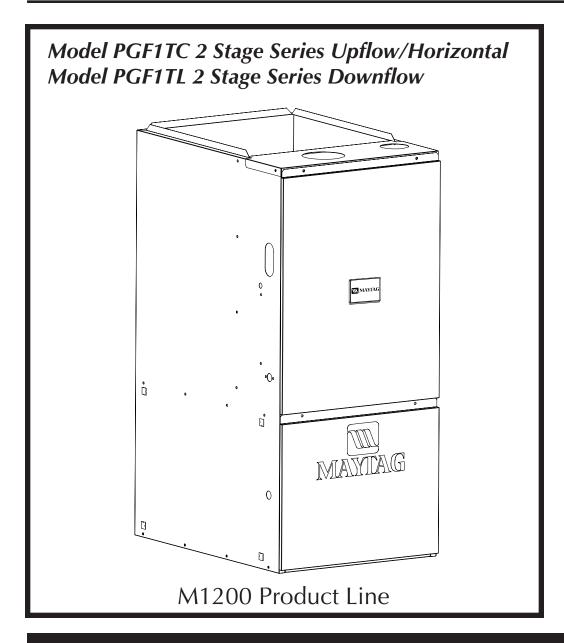

The high efficiency 2-Stage gas furnace may be installed free standing in a utility room, basement, or enclosed in an alcove or closet. With kit, the upflow model converts easily to horizontal application. The extended flush jacket provides a pleasing "appliance appearance." Design certified by the CSA International (Canadian Standards Association).

### **Features and Benefits**

- 100% fired and tested All units and each component (both mechanical and electrical) are tested on the manufacturing line.
- Best packaging in the industry Unique design assures product will arrive to the homeowner dent free.
- Clean and quiet operation Due to the unique design of in-shot burners, location of inducer and use of insulation.
- Fixed 30 second blower delay at burner start-up assures a warm duct temperature at furnace start-up. Adjustable blower off settings (60, 120, 160 and 180 seconds).
- Fixed 30-second post purge increases life of heat exchanger.
- SmartStart<sup>TM</sup> Control Board Provides extended life to ignitors in furnaces using hot surface ignition technology. Programmed to learn the heat-up characteristics of the ignitor, then adapt the ignition time to the characteristics of the furnace so the ignitor is energized appropriately.
- Dependable, hot surface ignitor Innovative application of an appliance type ignitor with a 20-year history of reliability, assures no call-backs because of handling.
- Color coded wire harness Designed to fit the components, all with quick-connect fittings for ease of service and replacement.
- Tubular primary heat exchanger Heavy gauge aluminized steel heat exchanger assures a long life.
- Stainless steel secondary heat exchanger assures a long life.
- Fixed cooling cycle blower-off delay (TDR) increases cooling performance when matched with a Maytag coil.
- Approved for direct vent furnace, category IV venting system May be vertically or horizontally vented using either a one-pipe or two-pipe system for maximum flexibility in installation.
- Fully insulated blower cabinet for quiet operation.
- Variable speed blower Maximizes air conditioner and heat pump efficiencies. On selected units, SEER ratings up to 16 and HSPF ratings up to 8.5 are ARI listed.
- LP convertible Simple burner orifice and regulator spring change for ease of convertibility.
- Factory installed drain system for reliable performance.
- Diagnostic light flashes identify limit failure, pressure switch failure and improper ground and polarization — for easy troubleshooting.
- Incorporates integrated control board with connections for electronic air cleaner and humidifier.
- Two piece door design enhances furnace appearance and uses screw fasteners for great fit and accessibility.
- 3 amp fuse protection against low voltage shorts; protects transformer and control board.
- Low voltage terminal board for easy field wiring.

## **High Efficiency Upflow 92+ Gas Furnace**

### Roll-out switch.

#### Aluminized steel in-shot

**burners**, hot surface ignitor and redundant gas valve provide safe, reliable ignition and efficient combustion.

**Remote flame sensor** for proof of carry-over.

Supply air limit.

Two Stage Gas Valve.

**Vent switch** protects against blocked flue.

## Counterflow heat exchanger

orientation and aluminized steel tubular design, means improved efficiency and durability. (Not Shown)

SmartStart™ integrated control monitors the burner

flame and limit circuit continuously. Blower timing has adjustable OFF settings. Provides humidifier and electronic air cleaner connections.

Front door screw fasteners ensure tight fit.

**Vent Switch** protects against blocked flue.

Induced draft blower


provides quite and reliable operation.


**Fully Insulated** blower compartment.

Variable speed motor/blower

provides quiet airflow, reliable operation, and is installed on a slide out track.

Factory installed drain for reliable performance.

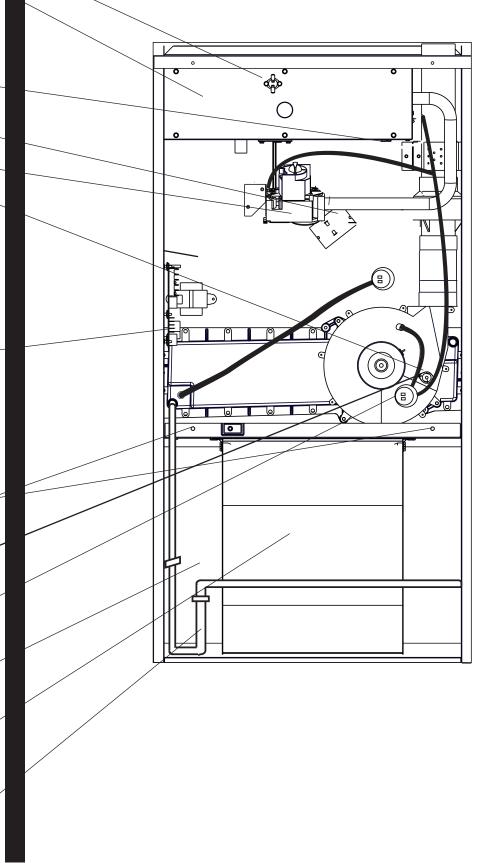


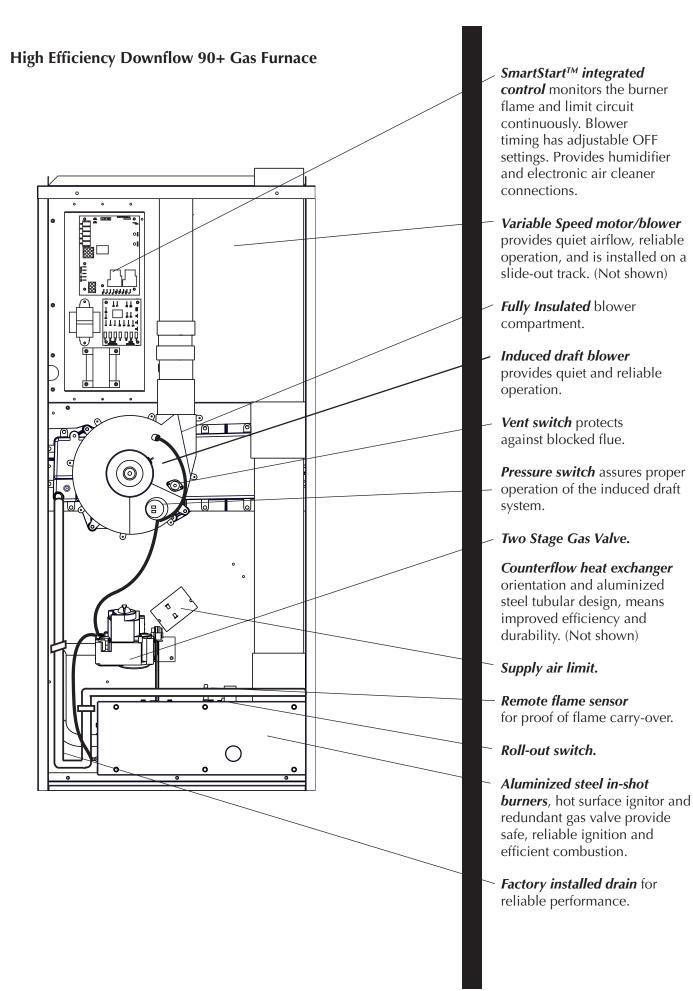

# **DIMENSIONS**


## **Upflow/Horizontal Furnace**

Model Number	High Fire Furnace	Low Fire Furnace		Dimensions (inches)								
PGF1TC	Btuh	Input	Α	А В		D	Weight (lbs)					
060	60,000	42,000	14 1/2	12 3/4	5 1/8	11 3/4	155					
080	80,000	56,000	19 3/4	18 1/4	7 7/8	17 1/4	195					
100	100,000	70,000	19 3/4	18 1/4	7 7/8	17 1/4	200					
120	120,000	84,000	22 1/2	21	9 1/4	20	220					

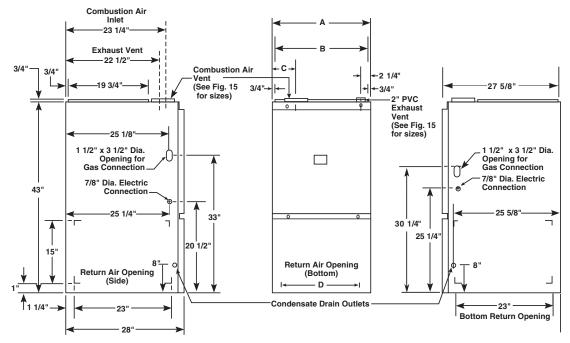

## **Downflow Furnace**

Model Number	High Fire Furnace	Low Fire Furnace	Di	es)	Shipping Weight		
PGF1TL	Btuh	Input	Α	В	С	D	(lbs)
060	60,000	42,000	14 1/2	12 3/4	5 1/8	11 3/4	165
080	80,000	56,000	19 3/4	18 1/4	7 7/8	17 1/4	215
100	100,000	70,000	19 3/4	18 1/4	7 7/8	17 1/4	215
120	120.000	84.000	22 1/2	21	9 1/4	20	225

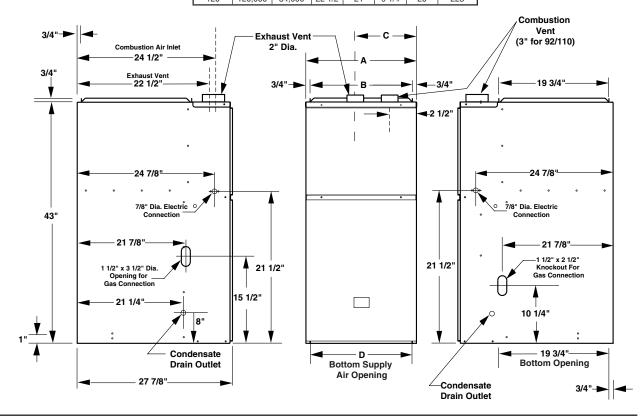

# STANDARD EQUIPMENT

Direct vent; draft inducer; pressure switch; redundant main gas control; hot-surface ignition; timed ON/OFF blower controls (TDR); 40VA transformer for air conditioner application; limit controls; direct drive motor; all models can be converted to use L.P. (propane) gas. Factory approved kits only must be used and are available as an optional accessory from your Maytag distributor.

# **SPECIFICATIONS**

MODEL NUMBER *TC	060(C,N)-VA	080(C,N)-VB	100(C,N)-VB	120(C,N)-VC
High Fire Rated Input(Btu/h) (a)	60,000	80,000	100,000	120,000
High Fire Heating Capacity(Btu/h)	55,000	74,000	92,000	110,400
Low Fire Rated Input(Btu/h) (a)	42,000	56,000	70,000	84,000
Low Fire Heating Capacity(Btu/h)	38,000	50,400	63,000	76,000
AFUE	92+	92+	92+	92+
Maximum Heating Ext. St. Press.(in WC)	0.5	0.5	0.5	0.5
Blower Wheel D x W	10 x 6	11 x 10	11 x 10	11 x 10
Motor H.PType	1/2 - Variable	3/4 - Variable	3/4 - Variable	3/4 - Variable
Motor FLA	7.7	9.6	9.6	9.6
High Fire Temperature Rise Range(F)	35-65	35-65	35-65	45-75
Low Fire Temperature Rise Range(F)	35-65	35-65	35-65	40-70

MODEL NUMBER *TL	060(C,N)-VA	080(C,N)-VB	100(C,N)-VB	120(C,N)-VC
High Fire Rated Input(Btu/h) (a)	60,000	80,000	100,000	120,000
High Fire Heating Capacity(Btu/h)	54,000	72,000	90,000	110,000
Low Fire Rated Input(Btu/h) (a)	42,000	56,000	70,000	84,000
Low Fire Heating Capacity(Btu/h)	38,000	50,000	63,000	76,000
AFUE	90+	90+	90+	90+
Maximum Heating Ext. St. Press.(in WC)	0.5	0.5	0.5	0.5
Blower Wheel D x W	10 x 6	11 x 10	11 x 10	11 x 10
Motor H.PType	1/2 - Variable	3/4 - Variable	3/4 - Variable	3/4 - Variable
Motor FLA	7.7	9.6	9.6	9.6
High Fire Temperature Rise Range(F)	35-65	30-60	35-65	45-75
Low Fire Temperature Rise Range(F)	35 - 65	30-60	35-65	45-75

<sup>()</sup> Can be C or N

Note: All models are 115V, 60 Hz. Gas Connections are 1/2" N.P.T. AFUE = Annual Fuel Utilization Efficiency.

<sup>(</sup>a) Ratings to 2,000 feet. Over 2,000 feet, reduce 4% for each 1,000 ft. above sea level.

## **VENTING**

All models are approved for vertical non direct (1 pipe) and direct (2 pipe) venting applications. See Vent Table below for specified sizes and allowable lengths.

APPLICATION		LENGTH (ft.) adius elbow**	DIRECT VENT, DUAL PIPE LENGTH (ft.) with 1 long radius elbow on each pipe**								
PVC,CPVC or ABS	Outlet	Outlet	Inlet/	Outlet	Inlet/0	Outlet	Inlet/Outlet				
SCH. 40 Pipe Size	2"	3"	2"	2"	" 3" 2"		3"	3"			
Models											
*T(C,L)	65	200	40	40	40	40	110	110			
060											
Models											
*T(C,L)	45	200	35	35	40	40	110	110			
080											
Models											
*T(C,L)	40	200	25	25	40	40	110	110			
100											
Models											
*T(C,L)	40	200	20	20	40	40	110	110			
120											

- \* NOTE:
- 1. Subtract 2.5 ft. for each additional 2" elbow and 3.5 ft. for each additional 3" elbow.
- 2. Two 45 degree elbows are equivalent to one 90 degree elbow.
- One short radius elbow is equivalent to two long radius elbows.
- 4. Do not include termination elbows in calculation of vent length.
- 5. This table is applicable for elevations from sea level to 2000 ft. For higher elevations decrease vent pipe lengths by 8% per 1000 ft. of altitude.
- 6. Only the listed pipe materials are approved for use with these Condensing Furnaces.

# **ELECTRICAL DATA**

1	ırnace nput Btuh)	Cabinet Width (in.)	Nominal Electrical Supply	Maximum Operating Voltage	Minimum Operating Voltage	Maximum Furnace Amperes	Minimum Wire Gauge	Maximum Fuse or Circuit Breaker Amps*
60	0,000	14.50	115-60-1	127	103	12	14	15
80	0,000	19.75	115-60-1	127	103	12	14	15
10	0,000	19.75	115-60-1	127	103	12	14	15
12	20,000	22.50	115-60-1	127	103	12	14	15

<sup>\*</sup> Time-delay fuses or HACR-type circuit breakers are required.

Thermostat Wire Gauge		led Thermostat Length 4 or 5-wire (cooling)				
24	55 ft.	25 ft.				
22	90 ft.	45 ft.				
20	140 ft.	70 ft.				
18	225 ft.	110 ft.				


# **VENT KITS**

Kit Description	Order Number
2" Concentric Vent Kit	904177
3" Concentric Vent Kit	904176
Neutralizer Kit (all models)	902377
2" Side Wall Vent Kit	904617
3" Side Wall Vent Kit	904347

# **ACCESSORIES**

Kit		Order Number
U.S. LP Conversion Kit (0 to 10,000 ft.)		904404
Canadian LP Gas Conversion Kit (0 to 4,500 ft.)		904405
Side Return Filter Kit		541036
Bottom Return Horizontal Installation	B Cabinet C Cabinet	903089 903090
Internal Side Return Filter Wire		903152
Horizontal Installation Kit		903568
Downflow "A" Combustion Floor Base		902974
Downflow "B" Combustion Floor Base		902677
Downflow "C" Combustion Floor Base		904108
High Altitude Pressure Switch Kit (5,000 ft. to 10,000 ft. above sea le	vel)	903852

## **IDENTIFICATION CODE**

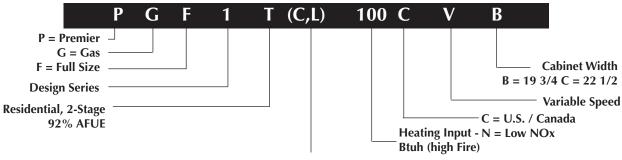

C = Upflow, Condensing L = Downflow, Condensing

## **CAPACITIES** — Furnace Airflow Data

### **Cooling/Heat Pump Airflow Settings**

CFM	S	WI	TCH	l N	UM	BE	R		Nominal A/C and
LOW	HIGH	1	2	3	4	5	6	7	HP Capacity
300	400	0	0	0	1				
330	480	0	0	0	0				No.
390	550	0	0	1	0				NO F
420	600	1	0	0	1				1.5.1
500	720	1	0	0	0				
550	800	1	0	1	0				z
580	830	0	1	0	1				2 TON
640	930	0	1	0	0				No L
700	1010	1	1	0	1				2.5.
730	1070	0	1	1	0				No Landau
780	1140	1	1	0	0				31
850	1230	1	1	1	0				

NOTE:  $0 = OFF \quad 1 = ON$ 

#### \*TC/L 060 (1/2 HP) Cooling/Heat Pump Airflow Settings

**Heating Airflow Settings** 

				Treating / millow settings														
				Nominal Airflow (CFM) and Temperature Rises (degree F)														
			*T(C		60(CN dels	I)-VA	*T(C,		30(CN dels	)-VB	*T(C,L)-100 (CN)-VB Models				*T(C,L)-120(CN)-VA Models			
Sw	witches Low Fire High Fire			l		High Fire Low Fire			"				High Fire					
5	6	7		000	60,0			Input   Input 56,000   80,000			Input 70,000		Input 100,000		Input 84,000		Input 120,000	
0	0	#	600	60	700	75	660	72	1090	63	660	90	1090	80	660	108	1090	96
1	0	#	660	54	800	65	750	64	1240	57	750	80	1240	70	750	95	1240	84
0	1	#	800	45	1048	50	1220	40	1680	42	1220	49	1680	52	1220	59	1680	62
1	1	#	900	40	1296	40	1300	37	1880	37	1300	46	1880	46	1300	55	1880	56

# Switch not used - Can be 0 or 1.

**CFM SWITCH NUMBER** Nominal A/C and **HP Capacity** LOW HIGH 

NOTE: 0 = OFF 1 = ON

#### \*TC/L 080/100/120 (3/4 HP) Cooling/Heat Pump Airflow Settings

#### Notes:

- Recommended temperature rises are highlighted in bold.
- 2. Airflow rates of 1800 CFM or more require two return air connections. Data is for operation with filter(s).
- 3. Temperature rises in the table are approximate. Actual temperature rises may vary.
- 4. Temperature rises that are shaded grey are for reference only. These conditions are not recommended.
- 5. For single stage cooling, the indoor blower will operate at the CFM listed in the high column.

Delay Settings

Delay Setting	, ,								
	Switch Number								
Delay Description	1	2	3	4	5	6	7	8	9
Delay A								0	0
Delay B								0	1
No Delay								1	0
De - Hum								1	1

Note: 0=Off, 1=On

- "Delay A" has a 2-step "on" profile operating the blower at 31% of the selected airflow for 30 seconds, then 75% of the selected airflow for 30 seconds. It will then operate at the selected airflow until the thermostat is satisfied, followed by an "off-cycle" profile running at 50% of the selected airflow for 60 seconds.
- "Delay B" has a single "on" profile operating the blower at 50% of the selected airflow for 30 seconds. It will then operate at the selected airflow until the thermostat is satisfied, followed by an "off-cycle" profile running at 50% of the selected airflow for 90 seconds.
- The "De-Hum" profile will operate the blower at 31% of the selected airflow for 30 seconds, followed by 75% of the selected airflow for 10 minutes. It will then operate at the selected airflow until the thermostat is satisfied.
- The "No Delay" option will ramp the blower up to the selected airflow. When the thermostat is satisfied, it will then ramp the blower off.















Before purchasing this appliance, read important energy cost and efficiency information available from your retailer. Specifications and illustrations subject to change without notice and without incurring obligations.

Manufactured under license by NORDYNE, O'Fallon, MO. ®Registered Trademark/™ Trademark of Maytag Corporation or its related companies. ©2007. All rights reserved.