### TECHNICAL SPECIFICATIONS

# **FG7TC Series**

Smartlite<sup>®</sup> Secologic<sup>®</sup> iCDrive<sup>®</sup> Two Stage, Variable Speed, Condensing Upflow/Horizontal Gas Furnaces Induced Draft - 95.1 AFUE Input 60,000 - 120,000 Btuh

The high efficiency upflow gas furnace may be installed free standing in a utility room, basement, or enclosed in an alcove or closet. Upflow/horizontal units come ready for upflow or horizontal application. The extended flush jacket provides a pleasing "appliance appearance." Design certified by CSA for application in Canada and the United States.



This furnace series is approved and certified by the SCAQM and the SJVAPC Districts in the state of California under each Districts' Mitigation Fee Plan for shipment into and sales in both districts.

For California installations in SCAQMD only: This furnace does not meet the SCAQMD Rule 1111 NOx emission limit (14 ng/J), and thus is subject to a mitigation fee of up to \$450. This furnace is not eligible for the Clean Air Furnace Rebate Program: www.CleanAirFurnaceRebate.com.

## FEATURES and BENEFITS

- Variable Speed Direct Drive Blower: Energy-efficient, brushless DC (ECM) motor controls airflow to provide better temperature control, humidity control and air distribution.
- **100% fired and tested:** All units and each component are tested on the manufacturing line.
- Best packaging in the industry: Unique corner post design assures product will arrive to the homeowner dent free.
- **30 second blower delay:** At start-up assures a warm duct temperature at furnace start-up. Adjustable blower off settings (60, 90, 120 and 180 seconds).
- 30 second post purge: Increases life of heat exchanger.
- **Two Stage Inducer:** Optimizes efficiency on first stage heat and reduces sound levels.
- Hot surface igniter: Innovative application of a silicon nitride type igniter. Utilizes proven Smartlite® technology.
- **Color coded wire harness:** Designed to fit the components, all with quick-connect fittings for ease of service and replacement.
- Flexible category IV venting system: May be vertically or horizontally vented using either a one-pipe or two-pipe system for maximum flexibility in installation.
- High Static Blowers: All models equipped with high static blowers.
- Low Boy Height: Easy to apply in low ceiling applications, works well with taller high SEER coils, easier to handle and install.
- **Tubular primary heat exchanger:** Heavy gauge aluminized steel heat exchanger and stainless steel secondary heat exchanger assures a long life.
- 60 second fixed cooling cycle blower-off delay (TDR): Increases cooling performance when matched with a Nortek Global HVAC coil.
- LP convertible: Simple burner orifice and regulator spring change for ease of convertibility.
- Diagnostic lights for easy troubleshooting without counting flashes: Dedicated light for flame signal strength and 2 lights in combination to indicate all other fault codes with easy to recognize states without counting flashes.
- **Incorporates integrated control board:** With connections for electronic air cleaner and humidifier. Ergonomically located for ease of service.
- **Two piece door design:** Enhances furnace appearance and uses captured screws to prevent losing door screws.
- Blower Compartment: Sealed door to reduce air leakage and insulated for ultra quiet operation.
- Sealed Vestibule: Reduces burner and inducer sound levels.
- Furnace Air Leakage: These furnaces comply with Energy Star cabinet air leakage requirement of less than or equal to 2%. Keep the conditioned air flowing to where it's needed.
- **PolyPro by DuraVent:** These furnaces have been tested with and are approved to be installed with DuraVent's PolyPro venting system.


\_ 2 \_\_\_\_\_

### LOCATION OF FURNACE COMPONENTS

#### Finish Flange Roll-Out Burner Flame Switch Assembly Sensor **Pressure Switches** Igniter (Inducer) · 100000 Gas Valve **Furnace Control Board** Main Air Limit Switch Inducer Limit Switch ۱ľ **Pressure Switches** Inducer Assembly (Condensate) 1 10 -Transformer Blower Door Switch ٠ Motor Control Box Motor Choke (C & D cabinets only) Motor Control Board 000 Blower Assembly

### **UPFLOW / HORIZONTAL FURNACE (\*TC SERIES)**

## DIMENSIONS

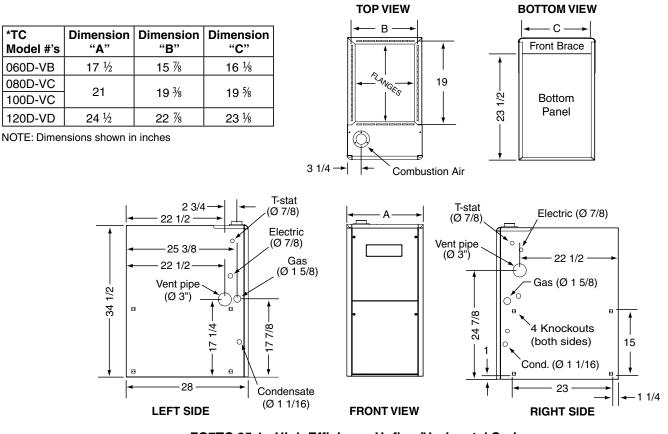

FG7TC 95.1+ High Efficiency Upflow/Horizontal Series

3 —

### G7TC, VSHE (B CABINET)

HEATING AIRFLOW (	F)	COOLING AIRFLOW (CFM)												
MODEL NUMBER/ HEATING INPUT	MOTOR SWITCH SETTINGS (0=OFF, 1=ON)	0514	RISE	MOTOR SWITCH SETTINGS (0=OFF, 1=ON)				CFM		NOMINAL AC / HP				
	1 2 3	4		1	5	6	7	8	LOW	HIGH	CAPACITY			
				1	0	0	0	0	470	700				
				1	0	0	0	1	510	760				2
				1	0	0	1	0	550	820				Ton
				1	0	0	1	1	590	880				
				1	0	1	0	0	630	940			2.5	
				1	0	1	0	1	670	1,000			Ton	
				1	0	1	1	0	710	1,060				
G7TC-060D-V24B				1	0	1	1	1	750	1,120				
60,000 BTU/hr		0 1,000	53	1	1	0	0	0	790	1,180		3		
	1 0 0	1 1,100	48	1	1	0	0	1	830	1,240		Ton		
	1 0 1	0 1,200	44	1	1	0	1	0	870	1,300				
	1 0 1	1 1,300	41	1	1	0	1	1	910	1,360	3.5	; —		
	1 1 0	0 1,400	38	1	1	1	0	0	950	1,420	То			
	1 1 0	1		1	1	1	0	1	990	1,480				
		0		1	1	1	1	0		1,540				
		1		1	1	1	1	1	1,070	1,600				

#### NOTES:

1. Motor switch settings for heating speeds use HEAT switches 1, 2, 3, & 4 and for cooling speeds use COOL switches 5, 6, 7, & 8.

2. To comply with government mandated efficiency standards, two openings are required for airflows above 1,600 CFM.

3. Data is shown without filter.

4. Temperature rises in the table are approximate. Actual temperature rises may vary.

5. Individual cells shaded in gray indicate a temperature rise outside of the recommended range.

6. To comply with government mandated efficiency standards, speed settings shaded in gray are not allowed in HEAT mode.

7. When in low stage heat, the airflow is approximately 70% of the tables high value (2-stage furnaces only).

### G7TC, VSHE (C CABINET)

HEATING AIRFLOW (CFM) & TEMPERATURE RISE (°F)								COOLING AIRFLOW (CFM)					IRFLOW (CFM)			
MOTOR SWITCH MODEL NAME/ HEATING INPUT		S	80,000		100D-V35C 100,000 BTU/hr		MOTOR SWITCH SETTINGS (0=OFF, 1=ON)			CFM		NOMINAL AC / HP CAPACITY				
	1	2	3	4	CFM	RISE	CFM	RISE	1	5	6	7	8	LOW	HIGH	1
									#	0	0	0	0	685	1,025	
									#	0	0	0	1	730	1,090	TON
									#	0	0	1	0	775 815	1,155	
									#	0	1	0	0	860	1,220	
									#	0	1	0	1	905	1,350	
									#	0	1	1	0	950	1,415	
G7TC-									#	0	1	1	1	990	1,480	
	#	0	0	0	4 4 4 5	63			#	1	0	0	0	1,035	1,545	
	#	0	0	0	1,115 1,230	57			#	1	0	0	0	1,080	1,610 1,675	
	#	0	1	1	1,230	52	1,345	65	#	1	0	1	1	1,165	1,740	
	#	1	0	0	1,460	48	1,460	60	#	1	1	0	0	1,210	1,805	
	#	1	0	1	1,575	44	1,575	56	#	1	1	0	1	1,255	1,870	
	#	1	1	0	1,690	41	1,690	52	#	1	1	1	0	1,295	1,935	
	#	1	1	1					#	1	1	1	1	1,340	2,000	

#### NOTES:

1. Motor switch settings for heating speeds use HEAT switches 1, 2, 3, & 4 and for cooling speeds use COOL switches 5, 6, 7, & 8.

2. To comply with government mandated efficiency standards, two openings are required for airflows above 1,600 CFM.

3. Data is shown without filter.

4. Temperature rises in the table are approximate. Actual temperature rises may vary.

5. Individual cells shaded in gray indicate a temperature rise outside of the recommended range.

6. To comply with government mandated efficiency standards, speed settings shaded in gray are not allowed in HEAT mode.

7. When in low stage heat, the airflow is approximately 70% of the tables high value (2-stage furnaces only).

## VENTING

All models are approved for vertical non direct (1 pipe) and direct (2 pipe) venting applications. See Vent Table below for specified sizes and allowable lengths.

FURNACE MODELS	FURNACE		LENGTH (FT.) adius elbow**	DIRECT VENT, DUAL PIPE LENGTH (ft.) WITH 1 long radius elbow on each pipe**			
(BTU)	INSTALLATION	OUTLET	OUTLET	INLET/OUTLET	INLET/OUTLET 3" Diameter		
		2" Diameter	3" Diameter	2" Diameter			
60,000	Upflow	90 90		90	90		
60,000	Horizontal	50	90	50	90		
80,000	Upflow	40	90	40	90		
80,000	Horizontal	30	90	30	90		
100.000	Upflow	30	90	30	90		
100,000 Horizontal		30	90	30	90		
120,000	Upflow	N/A	90	N/A	90		
120,000	Horizontal	N/A	90	N/A	90		


## **VENT TABLE**

\*NOTES:

1. Subtract 2.5 ft. for each additional 2 inch long radius elbow, 5 ft. for each additional 2 inch short radius elbow, 3.5 ft. for each additional 3 inch long radius elbow, and 7 ft. for each additional 3 inch short radius elbow. Subtract 5ft for each 2" tee and 8ft for each 3" tee.

2. Two 45 degree elbows are equivalent to one 90 degree elbow.

3. This table applies for elevations from sea level to 2,000 ft. For higher elevations, decrease pipe lengths by 8% per 1,000 ft of altitude.

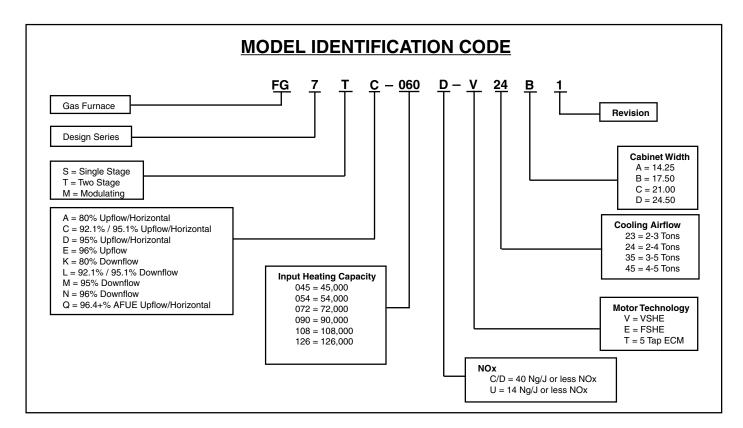

## **SPECIFICATIONS**

FG7TC MODEL NUMBERS	-060D-V24B1	-080D-V35C1	-100D-V35C1		
Input - Btuh (a)	60000 / 39000	80000 / 52000	100000 / 65000		
Heating Capacity - BtuH	57000 / 37000	76000 / 49000	95000 / 62000		
AFUE	95.0	95.0	95.0		
Motor H.P Speed - Type	3/4 - Variable	1 - Variable	1 - Variable		
Motor FLA	8.8	11.5	11.5		
Rated Ext. SP - In. W.C.	0.50	0.50	0.50		
Temperature Rise Range - F	30-60	35-65	35-65		
Shipping Weights	120 lb	140 lb	145 lb		
SKU	1025924F	1025925F	1025926F		

Note:

All models are 115V, 60 Hz. Gas Connections are 1/2" N.P.T. AFUE = Annual Fuel Utilization Efficiency (a) Ratings to 2,000 ft. Over 2,000 ft. reduce 4% for each 1,000 ft. above sea level.

## ACCESSORIES

FG7TC KITS						
Description	SKU					
2" Concentric Vent Kit, US approved only	904177					
3" Concentric Vent Kit, US approved only	904176					
2" Concentric Vent Kit, Canadian and US approved	904952					
3" Concentric Vent Kit, Canadian and US approved	904953					
2" Side Wall Vent Kit	904617					
3" Side Wall Vent Kit	904347					
U.S. LP Conversion Kit (0 to 10,000 ft.)	905028					
Canada LP Conversion Kit (0 to 4,500 ft.)	905029					
Bottom Return Filter 20 per Box, "A" Cabinet	903088					
Bottom Return Filter 20 per Box, "B" Cabinet	904916					
Bottom Return Filter 20 per Box, "C" Cabinet	904917					
Bottom Return Filter 20 per Box, "D" Cabinet	904918					
Side Return Filter Kit	541036					
Neutralizer Kit	902377					



### **GENERAL TERMS OF LIMITED WARRANTY**

Nortek Global HVAC, LLC will furnish a replacement for any part of this product which fails in normal use and service within the terms and conditions of the warranty.

For complete details of the Limited Warranty, including applicable terms and conditions, see your local installer or contact the Nortek Global HVAC, LLC warranty department for a copy.

Before purchasing this appliance, read important energy cost and efficiency information available from your retailer. Specifications and illustrations subject to change without notice and without incurring obligations. Printed in U.S.A (06/2019)