

# **KG6TE Series**


# High Efficiency / Direct Vent or Non Direct Vent 2-Stage Condensing Gas Furnace with Variable Speed Blower

## 95.1 Upflow/Horizontal

The high efficiency 2-Stage gas furnace may be installed free standing in a utility room, basement, or enclosed in an alcove or closet. The upflow model converts easily to horizontal application. The extended flush jacket provides a pleasing "appliance appearance." Design certified by CSA International (Canadian Standards Association).

## **Features and Benefits**


- Warranty
  - This product offers a 10-year all-parts warranty.
  - This product offers a 10 Year Quality Pledge to replace the unit if the heat exchanger fails within the first 10 years of operation, to the original owner.
  - Consumer product registration required for 10 year All Parts Warranty and Quality Pledge within a limited period of time after the installation. See current warranty document for warranty details.
  - Also when registered, this furnace upgrades to a limited lifetime heat exchanger warranty.
- 100% fired and tested All units and each component (both mechanical and electrical) are tested on the manufacturing line.
- Best packaging in the industry Unique design assures product will arrive to the homeowner dent free.
- Clean, quiet, and efficient operation Due to the unique design of in-shot burners, location of inducer, use of insulation, and operating at low fire using less fuel than single capacity furnaces.
- Fixed 30 second blower delay at burner start-up assures a warm duct temperature at furnace start-up.
- Fixed 30-second inducer post purge increases life of heat exchanger.
- Dependable, hot surface ignitor Innovative application of an appliance type ignitor with a 20-year history of reliability, assures no call-backs because of handling.
- Color coded wire harness Designed to fit the components, all with quick-connect fittings for ease of service and replacement.
- Reliable heat exchanger Aluminized primary and stainless steel secondary heat exchanger assures long life
- 40-second fixed cooling cycle blower-off delay (TDR) increases cooling performance when matched with a NORDYNE coil.

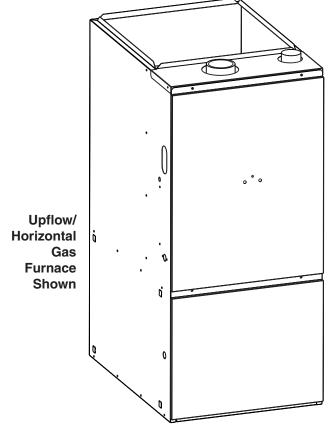

- Approved for direct vent and non direct vent furnace, category IV venting system – May be vertically or horizontally vented using either a one-pipe or two-pipe system for maximum flexibility in installation.
- Variable speed blower included to maximize air conditioner and heat pump efficiencies. On selected units, SEER ratings up to 16 and HSPF ratings up to 8.5 are ARI listed.
- LP convertible Simple burner orifice and regulator spring change for ease of convertibility.
- Factory installed drain system for reliable performance.
- Diagnostic light flashes identify limit failure, pressure switch failure and improper ground and polarization for easy troubleshooting.
- Incorporates integrated control board with connections for electronic air cleaner and humidifier.
- Two piece door design enhances furnace appearance and uses screw fasteners for great fit and accessibility.
- 3 amp fuse protection against low voltage shorts; protects transformer and control board.
- Low voltage terminal board for easy field wiring.

## **FEATURES**

## **High Efficiency Upflow 95.1 Gas Furnace**

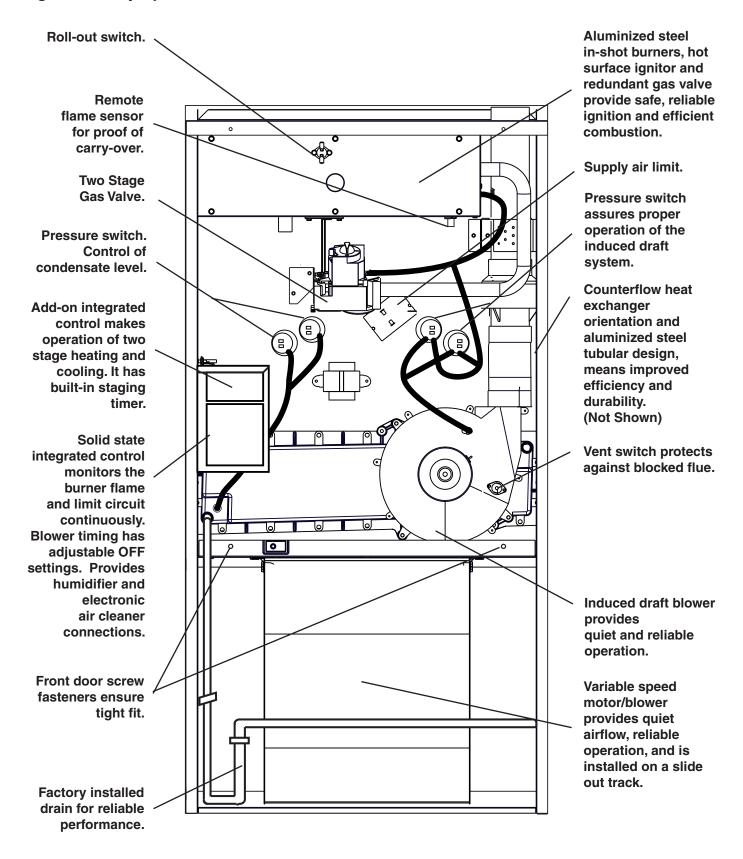


## STANDARD EQUIPMENT

Direct vent; draft inducer; pressure switch; redundant main gas control; hot-surface ignition; timed ON/OFF blower controls (TDR); 40VA transformer for air conditioner application; limit controls; direct drive motor; all models can be converted to use L.P. (propane) gas. Factory approved kits *only* must be used and are available as an optional accessory from your NORDYNE distributor.


## **SPECIFICATIONS**

MODEL NUMBER *TE	060(C,N)-VA	060(C,N)-VB	080(C,N)-VB	100(C,N)-VB	120(C,N)-VC
High Fire Rated Input(Btu/h) (a)	60,000	60,000	80,000	100,000	120,000
High Fire Heating Capacity(Btu/h)	57,000	57,000	76,000	95,000	114,400
Low Fire Rated Input(Btu/h) (a)	42,000	42,000	56,000	70,000	84,000
Low Fire Heating Capacity(Btu/h)	40,000	40,000	53,000	67,000	72,000
AFUE	95+	95+	95+	95+	95+
Maximum Heating Ext. St. Press.(in WC)	0.5	0.5	0.5	0.5	0.5
Blower Wheel D x W	10 x 6	10 x 6	11 x 10	11 x 10	11 x 10
Motor H.PType	1/2 - Variable	3/4 - Variable	3/4 - Variable	3/4 - Variable	3/4 - Variable
Motor FLA	7.7	9.6	9.6	9.6	9.6
High Fire Temperature Rise Range(F)	30-60	30-60	30-60	35-65	45-75
Low Fire Temperature Rise Range(F)	30-60	30-60	30-60	35-65	40-70

## **DIMENSIONS**

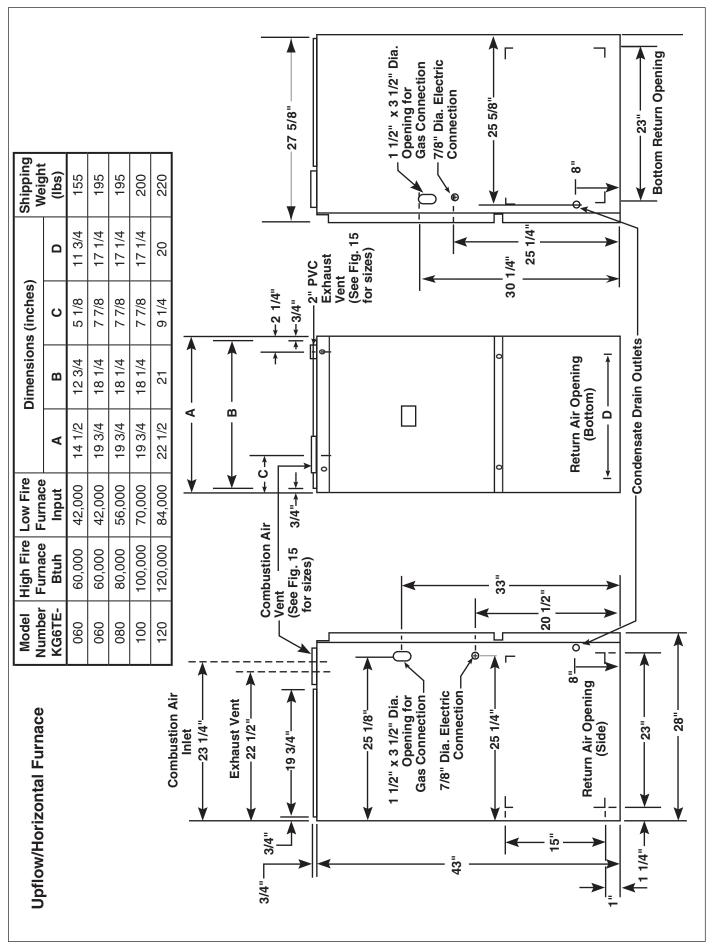

### **MODEL IDENTIFICATION CODE**

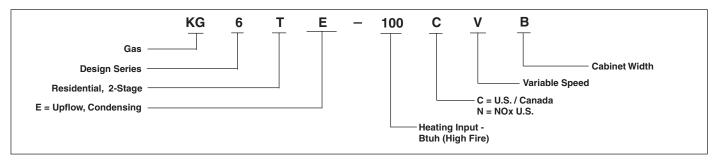

### **VENTING**

All models are approved for vertical non direct (1 pipe) and direct (2 pipe) venting applications. See Vent Table below for specified sizes and allowable lengths.

#### **VENT TABLE**

APPLICATION		LENGTH (ft.) adius elbow**	DIRECT VENT, DUAL PIPE LENGTH (ft.) with 1 long radius elbow on each pipe**						
PVC,CPVC or ABS	Outlet	Outlet	Inlet/0	Outlet	Inlet/0	Outlet	Inlet/Outlet		
SCH. 40 Pipe Size	2"	3"	2"	2"	3"	2"	3"	3"	
Models									
*TE	65	200	30	30	40	40	110	110	
060									
Models									
*TE	45	200	30	30	40	40	110	110	
080									
Models									
*TE	40	200	25	25	40	40	110	110	
100									
Models									
*TE	40	200	20	20	40	40	110	110	
120									

#### \*\* NOTES

- 1.3.5' for each additional 3" **long** radius elbow, and 7' for each additional 3" **short** radius elbow.
- Two 45 degree elbows are equivalent to one 90 degree elbow
- 3. Do not include termination elbows in calculation of vent length.
- 4. This table is applicable for elevations from sea level to 2000 ft. For higher elevations decrease vent pipe lengths by 8% per 1000 ft. of altitude.
- 5. Only the above pipe materials are approved for use with these condensing furnaces.

#### **ACCESSORIES**

Kit		Order Number
U.S. LP Conversion Kit (0 to 10,000 ft.)		904404
Canadian LP Gas Conversion Kit (0 to 4,500 ft.)		904405
Side Return Filter Kit		541036
Bottom Return	B Cabinet	903089
Horizontal Installation	C Cabinet	903090
Internal Side Return Filter Wire		903152
Horizontal Installation Kit		903568
Add-on control Replacement Kit		904580
High Altitude Pressure Switch Kit (5,000 ft. to 10,000 ft. above sea level)		903852

### **VENT KITS**

Kit Description	Order Number
2" Concentric Vent Kit	904177
3" Concentric Vent Kit	904176
Neutralizer Kit (all models)	902377
2" Side Wall Vent Kit	904617
3" Side Wall Vent Kit	904347

### **ELECTRICAL DATA**

Furnace Input (Btuh)	Cabinet Width (in.)	Nominal Electrical Supply	Maximum Operating Voltage	Minimum Operating Voltage	Maximum Furnace Amperes	Minimum Wire Gauge	Maximum Fuse or Circuit Breaker Amps*
60,000	14.50	115-60-1	127	103	12	14	15
60,000	19.75	115-60-1	127	103	12	14	15
80,000	19.75	115-60-1	127	103	12	14	15
100,000	19.75	115-60-1	127	103	12	14	15
120,000	22.50	115-60-1	127	103	12	14	15

Thermostat Wire Gauge		edThermostat Length 4 or 5-wire (cooling)
24	55 ft.	25 ft.
22	90 ft.	45 ft.
20	140 ft.	70 ft.
18	225 ft.	110 ft.

<sup>\*</sup> Time-delay fuses or HACR-type circuit breakers are required.

## **CAPACITIES** — Furnace Airflow Data

CFM	S	WI	ΓCH	l N	UM	BEI	R		Nominal A/C and
LOW	HIGH	1	2	3	4	5	6	7	HP Capacity
300	400	0	0	0	1				
330	480	0	0	0	0				
390	550	0	0	1	0				NOT 1
420	600	1	0	0	1				Т.5.Т
500	720	1	0	0	0				
550	800	1	0	1	0				Z
580	830	0	1	0	1				Not 2
640	930	0	1	0	0				NO L
700	1010	1	1	0	1				2.57
730	1070	0	1	1	0				NOT LINE
780	1140	1	1	0	0				31
850	1230	1	1	1	0				

Note: 0 = Off 1 = On

\*TE 060 (1/2 HP)

Cooling/Heat Pump Airflow Settings

CFM	S	WI	ГCН	l N	UM	BEI	R		Nominal A/C and
LOW	HIGH	1	2	3	4	5	6	7	HP Capacity
500	720	0	0	0	1				
550	800	0	0	0	0				No.
610	880	0	0	1	0				N 0 2
650	945	1	0	0	1				
720	1050	1	0	0	0				
800	1155	1	0	1	0				
900	1305	0	1	0	1				NOT S
1000	1450	0	1	0	0				
1060	1530	1	1	0	1				
1100	1595	0	1	1	0				NOT 4
1170	1700	1	1	0	0				0 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
1290	1870	1	1	1	0				

Note: 0 - Off 1 = On

\*TE 060/080/100/120 (3/4 HP)

Cooling/Heat Pump Airflow Settings

				Nominal Airflow (CFM) and Temperature Rises (degree F)															
			*TE-	060(	CN)-V	A/B	*TE	-080	(CN)-	VB	*TE	-100	(CN)-VB *TE-120(C					N)-VA	
				Mod	dels		Models					Mod	dels		Models				
Sw	itch	nes			High		Low	Low Fire		ire High Fire Lov		Fire	High	Fire	Low	Fire	High	Fire	
5	6	7	Inp 43,0		Inp 60,0		l	out	Inp 80,0	ut	Inp 70,0	out	Inp 100,	out	Inp 84,0	out	Input 120,000		
0	0	#	600	60	700	75	660	72	1090	63	660	90	1090	80	660	108	1090	96	
1	0	#	660	54	800	65	750	64	1240	57	750	80	1240	70	750	95	1240	84	
0	1	#	800	45	1048	50	1220	1220 40		42	1220	49	1680	52	1220	59	1680	62	
1	1	#	900	40	1296	40	1300	37	1880	37	1300	46	1880	46	1300	55	1880	56	

# Switch not used - Can be 0 or 1.

#### Notes:

- Recommended blower speed settings are highlighted in bold.
- 2. Airflow rates of 1800 CFM or more require two return air connections. Data is for operation with filter(s).
- 3. Temperature rises in the table are approximate. Actual temperature rises may vary.
- Temperature rises that are shaded grey are for reference only. These conditions are not recommended.
- 5. For single stage cooling, the indoor blower will operate at the CFM listed in the "High" column.

**Delay Settings** 

	Switch Number									
Delay Description	1 2 3 4 5 6 7 8 9									
Delay A								0	0	
Delay B								0	1	
No Delay								1	0	
De - Hum								1	1	

Note: 0 = Off, 1 = On

- "Delay A" has a 2-step "on" profile operating the blower at 31% of the selected airflow for 30 seconds, then 75% of the selected airflow for 30 seconds. It will then operate at the selected airflow until the thermostat is satisfied, followed by an "off-cycle" profile running at 50% of the selected airflow for 60 seconds.
- "Delay B" has a single "on" profile operating the blower at 50% of the selected airflow for 30 seconds. It will then operate at the selected airflow until the thermostat is satisfied, followed by an "off-cycle" profile running at 50% of the selected airflow for 90 seconds.
- The "De-Hum" profile will operate the blower at 31% of the selected airflow for 30 seconds, followed by 75% of the selected airflow for 10 minutes. It will then operate at the selected airflow until the thermostat is satisfied.
- The "No Delay" option will ramp the blower up to the selected airflow.
   When the thermostat is satisfied, it will then ramp the blower off.











